



**ROLLS-ROYCE CORPORATION  
ENGINE LOGBOOK INSTRUCTIONS  
LIFE LIMITED PARTS RECORD**

GT-10047-1

1. **LIFE LIMIT:** Enter the accumulated life limit (hours or cycles) as listed in the Engine Maintenance Manual.
2. **PART NAME:** Enter name of part.
3. **PART NUMBER:** Enter part number.
4. **SERIAL NUMBER:** Enter part serial number.
5. **ASSEMBLY IDENTIFICATION:** This section identifies the assembly on which the part is installed or removed..  
Name: Enter name of assembly on which part is installed.  
Part Number: Enter assembly part number.  
Serial Number: Enter assembly serial number.
6. **PART INSTALLATION SECTION:** This section is used to record time information at part installation.  
Date: Enter date of part installation.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part installation.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of installation.
7. **PART REMOVAL SECTION:** This section is used to record time information at part removal.  
Date: Enter date of part removal.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part removal.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of removal.
8. **REMARKS:** This space is available for relevant supporting information or additional comments.



# SECTION 3 PART II

# LIFE LIMITED PARTS RECORD

This record to remain with part listed.							
2. PART NAME: <b>FAN DRIVE SHAFT</b>		✓3. PART NUMBER: <b>23074382</b>		4. SERIAL NUMBER: <b>GV246254</b>			
5. ASSEMBLY IDENTIFICATION		6. PART INSTALLATION SECTION			7. PART REMOVAL SECTION		
NAME: FAN ROTOR			ASSY TOTAL	PART TOTAL		ASSY TOTAL	PART TOTAL
PART NUMBER			HOURS	HOURS		HOURS	HOURS
SERIAL NUMBER		DATE	CYCLES	CYCLES	DATE	CYCLES	CYCLES
23058869		26 JAN	0	0			
MW50854		2007	0	0			

**8. REMARKS**

DATE: 15 APR 2014, 3661 CSN, PIECE PART INSPECTION COMPLIED WITH ON W/O# EN182179, IAW ROLLS ROYCE MM-CSP 34012 (CHAPTER 05-13-00) REV. 65, DATED 2007 2013, STANDARD AERO (ALLIANCE) INC. R/S# AE0R215N. *[Signature]*

Date: 18 JULY 2018 -Fan drive shaft detail inspection per EM 72-21-15-200-801 at TSN/CSN: 11887.2 15761



**ROLLS-ROYCE CORPORATION  
ENGINE LOGBOOK INSTRUCTIONS  
LIFE LIMITED PARTS RECORD**

GT-10047-1

1. **LIFE LIMIT:** Enter the accumulated life limit (hours or cycles) as listed in the Engine Maintenance Manual.
2. **PART NAME:** Enter name of part.
3. **PART NUMBER:** Enter part number.
4. **SERIAL NUMBER:** Enter part serial number.
5. **ASSEMBLY IDENTIFICATION:** This section identifies the assembly on which the part is installed or removed..  
Name: Enter name of assembly on which part is installed.  
Part Number: Enter assembly part number.  
Serial Number: Enter assembly serial number.
6. **PART INSTALLATION SECTION:** This section is used to record time information at part installation.  
Date: Enter date of part installation.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part installation.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of installation.
7. **PART REMOVAL SECTION:** This section is used to record time information at part removal.  
Date: Enter date of part removal.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part removal.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of removal.
8. **REMARKS:** This space is available for relevant supporting information or additional comments.





**ROLLS-ROYCE CORPORATION  
ENGINE LOGBOOK INSTRUCTIONS  
LIFE LIMITED PARTS RECORD**

GT-10047-1

1. **LIFE LIMIT:** Enter the accumulated life limit (hours or cycles) as listed in the Engine Maintenance Manual.
2. **PART NAME:** Enter name of part.
3. **PART NUMBER:** Enter part number.
4. **SERIAL NUMBER:** Enter part serial number.
5. **ASSEMBLY IDENTIFICATION:** This section identifies the assembly on which the part is installed or removed.  
Name: Enter name of assembly on which part is installed.  
Part Number: Enter assembly part number.  
Serial Number: Enter assembly serial number.
6. **PART INSTALLATION SECTION:** This section is used to record time information at part installation.  
Date: Enter date of part installation.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part installation.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of installation.
7. **PART REMOVAL SECTION:** This section is used to record time information at part removal.  
Date: Enter date of part removal.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part removal.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of removal.
8. **REMARKS:** This space is available for relevant supporting information or additional comments.





**ROLLS-ROYCE CORPORATION  
ENGINE LOGBOOK INSTRUCTIONS  
LIFE LIMITED PARTS RECORD**

GT-10047-1

1. **LIFE LIMIT:** Enter the accumulated life limit (hours or cycles) as listed in the Engine Maintenance Manual.
2. **PART NAME:** Enter name of part.
3. **PART NUMBER:** Enter part number.
4. **SERIAL NUMBER:** Enter part serial number.
5. **ASSEMBLY IDENTIFICATION:** This section identifies the assembly on which the part is installed or removed..  
Name: Enter name of assembly on which part is installed.  
Part Number: Enter assembly part number.  
Serial Number: Enter assembly serial number.
6. **PART INSTALLATION SECTION:** This section is used to record time information at part installation.  
Date: Enter date of part installation.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part installation.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of installation.
7. **PART REMOVAL SECTION:** This section is used to record time information at part removal.  
Date: Enter date of part removal.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part removal.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of removal.
8. **REMARKS:** This space is available for relevant supporting information or additional comments.





**ROLLS-ROYCE CORPORATION  
ENGINE LOGBOOK INSTRUCTIONS  
LIFE LIMITED PARTS RECORD**

GT-10047-1

1. **LIFE LIMIT:** Enter the accumulated life limit (hours or cycles) as listed in the Engine Maintenance Manual.
2. **PART NAME:** Enter name of part.
3. **PART NUMBER:** Enter part number.
4. **SERIAL NUMBER:** Enter part serial number.
5. **ASSEMBLY IDENTIFICATION:** This section identifies the assembly on which the part is installed or removed..  
Name: Enter name of assembly on which part is installed.  
Part Number: Enter assembly part number.  
Serial Number: Enter assembly serial number.
6. **PART INSTALLATION SECTION:** This section is used to record time information at part installation.  
Date: Enter date of part installation.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part installation.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of installation.
7. **PART REMOVAL SECTION:** This section is used to record time information at part removal.  
Date: Enter date of part removal.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part removal.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of removal.
8. **REMARKS:** This space is available for relevant supporting information or additional comments.





**ROLLS-ROYCE CORPORATION  
ENGINE LOGBOOK INSTRUCTIONS  
LIFE LIMITED PARTS RECORD**

GT-10047-1

1. **LIFE LIMIT:** Enter the accumulated life limit (hours or cycles) as listed in the Engine Maintenance Manual.
2. **PART NAME:** Enter name of part.
3. **PART NUMBER:** Enter part number.
4. **SERIAL NUMBER:** Enter part serial number.
5. **ASSEMBLY IDENTIFICATION:** This section identifies the assembly on which the part is installed or removed..  
Name: Enter name of assembly on which part is installed.  
Part Number: Enter assembly part number.  
Serial Number: Enter assembly serial number.
6. **PART INSTALLATION SECTION:** This section is used to record time information at part installation.  
Date: Enter date of part installation.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part installation.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of installation.
7. **PART REMOVAL SECTION:** This section is used to record time information at part removal.  
Date: Enter date of part removal.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part removal.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of removal.
8. **REMARKS:** This space is available for relevant supporting information or additional comments.





**ROLLS-ROYCE CORPORATION  
ENGINE LOGBOOK INSTRUCTIONS  
LIFE LIMITED PARTS RECORD**

GT-10047-1

1. **LIFE LIMIT:** Enter the accumulated life limit (hours or cycles) as listed in the Engine Maintenance Manual.
2. **PART NAME:** Enter name of part.
3. **PART NUMBER:** Enter part number.
4. **SERIAL NUMBER:** Enter part serial number.
5. **ASSEMBLY IDENTIFICATION:** This section identifies the assembly on which the part is installed or removed.  
Name: Enter name of assembly on which part is installed.  
Part Number: Enter assembly part number.  
Serial Number: Enter assembly serial number.
6. **PART INSTALLATION SECTION:** This section is used to record time information at part installation.  
Date: Enter date of part installation.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part installation.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of installation.
7. **PART REMOVAL SECTION:** This section is used to record time information at part removal.  
Date: Enter date of part removal.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part removal.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of removal.
8. **REMARKS:** This space is available for relevant supporting information or additional comments.





**ROLLS-ROYCE CORPORATION  
ENGINE LOGBOOK INSTRUCTIONS  
LIFE LIMITED PARTS RECORD**

GT-10047-1

1. **LIFE LIMIT:** Enter the accumulated life limit (hours or cycles) as listed in the Engine Maintenance Manual.
2. **PART NAME:** Enter name of part.
3. **PART NUMBER:** Enter part number.
4. **SERIAL NUMBER:** Enter part serial number.
5. **ASSEMBLY IDENTIFICATION:** This section identifies the assembly on which the part is installed or removed..  
Name: Enter name of assembly on which part is installed.  
Part Number: Enter assembly part number.  
Serial Number: Enter assembly serial number.
6. **PART INSTALLATION SECTION:** This section is used to record time information at part installation.  
Date: Enter date of part installation.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part installation.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of installation.
7. **PART REMOVAL SECTION:** This section is used to record time information at part removal.  
Date: Enter date of part removal.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part removal.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of removal.
8. **REMARKS:** This space is available for relevant supporting information or additional comments.





**ROLLS-ROYCE CORPORATION  
ENGINE LOGBOOK INSTRUCTIONS  
LIFE LIMITED PARTS RECORD**

GT-10047-1

1. **LIFE LIMIT:** Enter the accumulated life limit (hours or cycles) as listed in the Engine Maintenance Manual.
2. **PART NAME:** Enter name of part.
3. **PART NUMBER:** Enter part number.
4. **SERIAL NUMBER:** Enter part serial number.
5. **ASSEMBLY IDENTIFICATION:** This section identifies the assembly on which the part is installed or removed..  
Name: Enter name of assembly on which part is installed.  
Part Number: Enter assembly part number.  
Serial Number: Enter assembly serial number.
6. **PART INSTALLATION SECTION:** This section is used to record time information at part installation.  
Date: Enter date of part installation.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part installation.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of installation.
7. **PART REMOVAL SECTION:** This section is used to record time information at part removal.  
Date: Enter date of part removal.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part removal.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of removal.
8. **REMARKS:** This space is available for relevant supporting information or additional comments.





**ROLLS-ROYCE CORPORATION  
ENGINE LOGBOOK INSTRUCTIONS  
LIFE LIMITED PARTS RECORD**

GT-10047-1

1. **LIFE LIMIT:** Enter the accumulated life limit (hours or cycles) as listed in the Engine Maintenance Manual.
2. **PART NAME:** Enter name of part.
3. **PART NUMBER:** Enter part number.
4. **SERIAL NUMBER:** Enter part serial number.
5. **ASSEMBLY IDENTIFICATION:** This section identifies the assembly on which the part is installed or removed..  
Name: Enter name of assembly on which part is installed.  
Part Number: Enter assembly part number.  
Serial Number: Enter assembly serial number.
6. **PART INSTALLATION SECTION:** This section is used to record time information at part installation.  
Date: Enter date of part installation.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part installation.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of installation.
7. **PART REMOVAL SECTION:** This section is used to record time information at part removal.  
Date: Enter date of part removal.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part removal.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of removal.
8. **REMARKS:** This space is available for relevant supporting information or additional comments.





**ROLLS-ROYCE CORPORATION  
ENGINE LOGBOOK INSTRUCTIONS  
LIFE LIMITED PARTS RECORD**

GT-10047-1

1. **LIFE LIMIT:** Enter the accumulated life limit (hours or cycles) as listed in the Engine Maintenance Manual.
2. **PART NAME:** Enter name of part.
3. **PART NUMBER:** Enter part number.
4. **SERIAL NUMBER:** Enter part serial number.
5. **ASSEMBLY IDENTIFICATION:** This section identifies the assembly on which the part is installed or removed.  
Name: Enter name of assembly on which part is installed.  
Part Number: Enter assembly part number.  
Serial Number: Enter assembly serial number.
6. **PART INSTALLATION SECTION:** This section is used to record time information at part installation.  
Date: Enter date of part installation.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part installation.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of installation.
7. **PART REMOVAL SECTION:** This section is used to record time information at part removal.  
Date: Enter date of part removal.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part removal.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of removal.
8. **REMARKS:** This space is available for relevant supporting information or additional comments.





**ROLLS-ROYCE CORPORATION  
ENGINE LOGBOOK INSTRUCTIONS  
LIFE LIMITED PARTS RECORD**

GT-10047-1

1. **LIFE LIMIT:** Enter the accumulated life limit (hours or cycles) as listed in the Engine Maintenance Manual.
2. **PART NAME:** Enter name of part.
3. **PART NUMBER:** Enter part number.
4. **SERIAL NUMBER:** Enter part serial number.
5. **ASSEMBLY IDENTIFICATION:** This section identifies the assembly on which the part is installed or removed..  
Name: Enter name of assembly on which part is installed.  
Part Number: Enter assembly part number.  
Serial Number: Enter assembly serial number.
6. **PART INSTALLATION SECTION:** This section is used to record time information at part installation.  
Date: Enter date of part installation.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part installation.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of installation.
7. **PART REMOVAL SECTION:** This section is used to record time information at part removal.  
Date: Enter date of part removal.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part removal.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of removal.
8. **REMARKS:** This space is available for relevant supporting information or additional comments.





**ROLLS-ROYCE CORPORATION  
ENGINE LOGBOOK INSTRUCTIONS  
LIFE LIMITED PARTS RECORD**

GT-10047-1

1. **LIFE LIMIT:** Enter the accumulated life limit (hours or cycles) as listed in the Engine Maintenance Manual.
2. **PART NAME:** Enter name of part.
3. **PART NUMBER:** Enter part number.
4. **SERIAL NUMBER:** Enter part serial number.
5. **ASSEMBLY IDENTIFICATION:** This section identifies the assembly on which the part is installed or removed..  
Name: Enter name of assembly on which part is installed.  
Part Number: Enter assembly part number.  
Serial Number: Enter assembly serial number.
6. **PART INSTALLATION SECTION:** This section is used to record time information at part installation.  
Date: Enter date of part installation.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part installation.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of installation.
7. **PART REMOVAL SECTION:** This section is used to record time information at part removal.  
Date: Enter date of part removal.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part removal.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of removal.
8. **REMARKS:** This space is available for relevant supporting information or additional comments.





**ROLLS-ROYCE CORPORATION  
ENGINE LOGBOOK INSTRUCTIONS  
LIFE LIMITED PARTS RECORD**

GT-10047-1

1. **LIFE LIMIT:** Enter the accumulated life limit (hours or cycles) as listed in the Engine Maintenance Manual.
2. **PART NAME:** Enter name of part.
3. **PART NUMBER:** Enter part number.
4. **SERIAL NUMBER:** Enter part serial number.
5. **ASSEMBLY IDENTIFICATION:** This section identifies the assembly on which the part is installed or removed..  
Name: Enter name of assembly on which part is installed.  
Part Number: Enter assembly part number.  
Serial Number: Enter assembly serial number.
6. **PART INSTALLATION SECTION:** This section is used to record time information at part installation.  
Date: Enter date of part installation.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part installation.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of installation.
7. **PART REMOVAL SECTION:** This section is used to record time information at part removal.  
Date: Enter date of part removal.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part removal.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of removal.
8. **REMARKS:** This space is available for relevant supporting information or additional comments.





**ROLLS-ROYCE CORPORATION  
ENGINE LOGBOOK INSTRUCTIONS  
LIFE LIMITED PARTS RECORD**

GT-10047-1

1. **LIFE LIMIT:** Enter the accumulated life limit (hours or cycles) as listed in the Engine Maintenance Manual.
2. **PART NAME:** Enter name of part.
3. **PART NUMBER:** Enter part number.
4. **SERIAL NUMBER:** Enter part serial number.
5. **ASSEMBLY IDENTIFICATION:** This section identifies the assembly on which the part is installed or removed..  
Name: Enter name of assembly on which part is installed.  
Part Number: Enter assembly part number.  
Serial Number: Enter assembly serial number.
6. **PART INSTALLATION SECTION:** This section is used to record time information at part installation.  
Date: Enter date of part installation.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part installation.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of installation.
7. **PART REMOVAL SECTION:** This section is used to record time information at part removal.  
Date: Enter date of part removal.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part removal.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of removal.
8. **REMARKS:** This space is available for relevant supporting information or additional comments.





**ROLLS-ROYCE CORPORATION  
ENGINE LOGBOOK INSTRUCTIONS  
LIFE LIMITED PARTS RECORD**

GT-10047-1

1. **LIFE LIMIT:** Enter the accumulated life limit (hours or cycles) as listed in the Engine Maintenance Manual.
2. **PART NAME:** Enter name of part.
3. **PART NUMBER:** Enter part number.
4. **SERIAL NUMBER:** Enter part serial number.
5. **ASSEMBLY IDENTIFICATION:** This section identifies the assembly on which the part is installed or removed..  
Name: Enter name of assembly on which part is installed.  
Part Number: Enter assembly part number.  
Serial Number: Enter assembly serial number.
6. **PART INSTALLATION SECTION:** This section is used to record time information at part installation.  
Date: Enter date of part installation.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part installation.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of installation.
7. **PART REMOVAL SECTION:** This section is used to record time information at part removal.  
Date: Enter date of part removal.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part removal.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of removal.
8. **REMARKS:** This space is available for relevant supporting information or additional comments.





**ROLLS-ROYCE CORPORATION  
ENGINE LOGBOOK INSTRUCTIONS  
LIFE LIMITED PARTS RECORD**

GT-10047-1

1. **LIFE LIMIT:** Enter the accumulated life limit (hours or cycles) as listed in the Engine Maintenance Manual.
2. **PART NAME:** Enter name of part.
3. **PART NUMBER:** Enter part number.
4. **SERIAL NUMBER:** Enter part serial number.
5. **ASSEMBLY IDENTIFICATION:** This section identifies the assembly on which the part is installed or removed..  
Name: Enter name of assembly on which part is installed.  
Part Number: Enter assembly part number.  
Serial Number: Enter assembly serial number.
6. **PART INSTALLATION SECTION:** This section is used to record time information at part installation.  
Date: Enter date of part installation.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part installation.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of installation.
7. **PART REMOVAL SECTION:** This section is used to record time information at part removal.  
Date: Enter date of part removal.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part removal.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of removal.
8. **REMARKS:** This space is available for relevant supporting information or additional comments.



# SECTION 3 PART II

# LIFE LIMITED PARTS RECORD

This record to remain with part listed.							
2. PART NAME: 1ST STG HP TURBINE WHEEL		✓3. PART NUMBER: 23079946			4. SERIAL NUMBER: MW51851		
5. ASSEMBLY IDENTIFICATION		6. PART INSTALLATION SECTION			7. PART REMOVAL SECTION		
NAME: HP TURBINE ROTOR			ASSY TOTAL	PART TOTAL		ASSY TOTAL	PART TOTAL
PART NUMBER			HOURS	HOURS		HOURS	HOURS
SERIAL NUMBER		DATE	CYCLES	CYCLES	DATE	CYCLES	CYCLES
23062609		26 JAN	0	0			
A72797		2007	0	0			
8. REMARKS	DATE: <u>21 APR 14</u> , <u>3661</u> CSN, PIECE PART INSPECTION COMPLIED WITH ON W/O# <u>Ew182149</u> . IAW ROLLS ROYCE MM CSP 34012 (CHAPTER 05-13-00) REV. <u>65</u> , DATED <u>20 OCT, 13</u> . STANDARD AERO (ALLIANCE) INC. R/S# AE0R215N. <u>2 2 3</u>						

**ROLLS-ROYCE CORPORATION  
ENGINE LOGBOOK INSTRUCTIONS  
LIFE LIMITED PARTS RECORD**

GT-10047-1

1. **LIFE LIMIT:** Enter the accumulated life limit (hours or cycles) as listed in the Engine Maintenance Manual.
2. **PART NAME:** Enter name of part.
3. **PART NUMBER:** Enter part number.
4. **SERIAL NUMBER:** Enter part serial number.
5. **ASSEMBLY IDENTIFICATION:** This section identifies the assembly on which the part is installed or removed..  
Name: Enter name of assembly on which part is installed.  
Part Number: Enter assembly part number.  
Serial Number: Enter assembly serial number.
6. **PART INSTALLATION SECTION:** This section is used to record time information at part installation.  
Date: Enter date of part installation.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part installation.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of installation.
7. **PART REMOVAL SECTION:** This section is used to record time information at part removal.  
Date: Enter date of part removal.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part removal.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of removal.
8. **REMARKS:** This space is available for relevant supporting information or additional comments.





**ROLLS-ROYCE CORPORATION  
ENGINE LOGBOOK INSTRUCTIONS  
LIFE LIMITED PARTS RECORD**

GT-10047-1

1. **LIFE LIMIT:** Enter the accumulated life limit (hours or cycles) as listed in the Engine Maintenance Manual.
2. **PART NAME:** Enter name of part.
3. **PART NUMBER:** Enter part number.
4. **SERIAL NUMBER:** Enter part serial number.
5. **ASSEMBLY IDENTIFICATION:** This section identifies the assembly on which the part is installed or removed..  
Name: Enter name of assembly on which part is installed.  
Part Number: Enter assembly part number.  
Serial Number: Enter assembly serial number.
6. **PART INSTALLATION SECTION:** This section is used to record time information at part installation.  
Date: Enter date of part installation.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part installation.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of installation.
7. **PART REMOVAL SECTION:** This section is used to record time information at part removal.  
Date: Enter date of part removal.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part removal.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of removal.
8. **REMARKS:** This space is available for relevant supporting information or additional comments.





**ROLLS-ROYCE CORPORATION  
ENGINE LOGBOOK INSTRUCTIONS  
LIFE LIMITED PARTS RECORD**

GT-10047-1

1. **LIFE LIMIT:** Enter the accumulated life limit (hours or cycles) as listed in the Engine Maintenance Manual.
2. **PART NAME:** Enter name of part.
3. **PART NUMBER:** Enter part number.
4. **SERIAL NUMBER:** Enter part serial number.
5. **ASSEMBLY IDENTIFICATION:** This section identifies the assembly on which the part is installed or removed..  
Name: Enter name of assembly on which part is installed.  
Part Number: Enter assembly part number.  
Serial Number: Enter assembly serial number.
6. **PART INSTALLATION SECTION:** This section is used to record time information at part installation.  
Date: Enter date of part installation.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part installation.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of installation.
7. **PART REMOVAL SECTION:** This section is used to record time information at part removal.  
Date: Enter date of part removal.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part removal.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of removal.
8. **REMARKS:** This space is available for relevant supporting information or additional comments.

(

(

(

(

(

(

(



**ROLLS-ROYCE CORPORATION  
ENGINE LOGBOOK INSTRUCTIONS  
LIFE LIMITED PARTS RECORD**

GT-10047-1

1. **LIFE LIMIT:** Enter the accumulated life limit (hours or cycles) as listed in the Engine Maintenance Manual.
2. **PART NAME:** Enter name of part.
3. **PART NUMBER:** Enter part number.
4. **SERIAL NUMBER:** Enter part serial number.
5. **ASSEMBLY IDENTIFICATION:** This section identifies the assembly on which the part is installed or removed.  
Name: Enter name of assembly on which part is installed.  
Part Number: Enter assembly part number.  
Serial Number: Enter assembly serial number.
6. **PART INSTALLATION SECTION:** This section is used to record time information at part installation.  
Date: Enter date of part installation.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part installation.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of installation.
7. **PART REMOVAL SECTION:** This section is used to record time information at part removal.  
Date: Enter date of part removal.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part removal.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of removal.
8. **REMARKS:** This space is available for relevant supporting information or additional comments.



# SECTION 3 PART II

# LIFE LIMITED PARTS RECORD

This record to remain with part listed.							
2. PART NAME: <b>2ND STG LP TURB WHEEL</b>		3. PART NUMBER: <b>23079221</b>			4. SERIAL NUMBER: <b>MW48796</b>		
5. ASSEMBLY IDENTIFICATION NAME: LP TURBINE ROTOR		6. PART INSTALLATION SECTION			7. PART REMOVAL SECTION		
PART NUMBER		DATE	ASSY TOTAL	PART TOTAL	DATE	ASSY TOTAL	PART TOTAL
SERIAL NUMBER			HOURS	HOURS		HOURS	HOURS
23070097		26 JAN	CYCLES	CYCLES	CYCLES	CYCLES	CYCLES
A82778		2007	0	0			
8. REMARKS							

**ROLLS-ROYCE CORPORATION  
ENGINE LOGBOOK INSTRUCTIONS  
LIFE LIMITED PARTS RECORD**

GT-10047-1

1. **LIFE LIMIT:** Enter the accumulated life limit (hours or cycles) as listed in the Engine Maintenance Manual.
2. **PART NAME:** Enter name of part.
3. **PART NUMBER:** Enter part number.
4. **SERIAL NUMBER:** Enter part serial number.
5. **ASSEMBLY IDENTIFICATION:** This section identifies the assembly on which the part is installed or removed..  
Name: Enter name of assembly on which part is installed.  
Part Number: Enter assembly part number.  
Serial Number: Enter assembly serial number.
6. **PART INSTALLATION SECTION:** This section is used to record time information at part installation.  
Date: Enter date of part installation.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part installation.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of installation.
7. **PART REMOVAL SECTION:** This section is used to record time information at part removal.  
Date: Enter date of part removal.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part removal.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of removal.
8. **REMARKS:** This space is available for relevant supporting information or additional comments.





**ROLLS-ROYCE CORPORATION  
ENGINE LOGBOOK INSTRUCTIONS  
LIFE LIMITED PARTS RECORD**

GT-10047-1

1. **LIFE LIMIT:** Enter the accumulated life limit (hours or cycles) as listed in the Engine Maintenance Manual.
2. **PART NAME:** Enter name of part.
3. **PART NUMBER:** Enter part number.
4. **SERIAL NUMBER:** Enter part serial number.
5. **ASSEMBLY IDENTIFICATION:** This section identifies the assembly on which the part is installed or removed..  
Name: Enter name of assembly on which part is installed.  
Part Number: Enter assembly part number.  
Serial Number: Enter assembly serial number.
6. **PART INSTALLATION SECTION:** This section is used to record time information at part installation.  
Date: Enter date of part installation.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part installation.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of installation.
7. **PART REMOVAL SECTION:** This section is used to record time information at part removal.  
Date: Enter date of part removal.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part removal.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of removal.
8. **REMARKS:** This space is available for relevant supporting information or additional comments.





**ROLLS-ROYCE CORPORATION  
ENGINE LOGBOOK INSTRUCTIONS  
LIFE LIMITED PARTS RECORD**

GT-10047-1

1. **LIFE LIMIT:** Enter the accumulated life limit (hours or cycles) as listed in the Engine Maintenance Manual.
2. **PART NAME:** Enter name of part.
3. **PART NUMBER:** Enter part number.
4. **SERIAL NUMBER:** Enter part serial number.
5. **ASSEMBLY IDENTIFICATION:** This section identifies the assembly on which the part is installed or removed..  
Name: Enter name of assembly on which part is installed.  
Part Number: Enter assembly part number.  
Serial Number: Enter assembly serial number.
6. **PART INSTALLATION SECTION:** This section is used to record time information at part installation.  
Date: Enter date of part installation.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part installation.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of installation.
7. **PART REMOVAL SECTION:** This section is used to record time information at part removal.  
Date: Enter date of part removal.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part removal.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of removal.
8. **REMARKS:** This space is available for relevant supporting information or additional comments.



# SECTION 3 PART II

# LIFE LIMITED PARTS RECORD

This record to remain with part listed.							
<b>2. PART NAME:</b> LP TURB INTERSTG SPACER		<b>3. PART NUMBER:</b> 23054049		<b>4. SERIAL NUMBER:</b> TW516288			
5. ASSEMBLY IDENTIFICATION		6. PART INSTALLATION SECTION		7. PART REMOVAL SECTION			
NAME: LP TURBINE ROTOR			ASSY TOTAL	PART TOTAL		ASSY TOTAL	PART TOTAL
PART NUMBER	DATE		HOURS	HOURS		HOURS	HOURS
SERIAL NUMBER			CYCLES	CYCLES		CYCLES	CYCLES
23070097	26 JAN	0	0				
A82778	2007	0	0				
<b>8. REMARKS</b>							

**ROLLS-ROYCE CORPORATION  
ENGINE LOGBOOK INSTRUCTIONS  
LIFE LIMITED PARTS RECORD**

GT-10047-1

1. **LIFE LIMIT:** Enter the accumulated life limit (hours or cycles) as listed in the Engine Maintenance Manual.
2. **PART NAME:** Enter name of part.
3. **PART NUMBER:** Enter part number.
4. **SERIAL NUMBER:** Enter part serial number.
5. **ASSEMBLY IDENTIFICATION:** This section identifies the assembly on which the part is installed or removed..  
Name: Enter name of assembly on which part is installed.  
Part Number: Enter assembly part number.  
Serial Number: Enter assembly serial number.
6. **PART INSTALLATION SECTION:** This section is used to record time information at part installation.  
Date: Enter date of part installation.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part installation.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of installation.
7. **PART REMOVAL SECTION:** This section is used to record time information at part removal.  
Date: Enter date of part removal.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part removal.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of removal.
8. **REMARKS:** This space is available for relevant supporting information or additional comments.





**ROLLS-ROYCE CORPORATION  
ENGINE LOGBOOK INSTRUCTIONS  
LIFE LIMITED PARTS RECORD**

GT-10047-1

1. **LIFE LIMIT:** Enter the accumulated life limit (hours or cycles) as listed in the Engine Maintenance Manual.
2. **PART NAME:** Enter name of part.
3. **PART NUMBER:** Enter part number.
4. **SERIAL NUMBER:** Enter part serial number.
5. **ASSEMBLY IDENTIFICATION:** This section identifies the assembly on which the part is installed or removed..  
Name: Enter name of assembly on which part is installed.  
Part Number: Enter assembly part number.  
Serial Number: Enter assembly serial number.
6. **PART INSTALLATION SECTION:** This section is used to record time information at part installation.  
Date: Enter date of part installation.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part installation.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of installation.
7. **PART REMOVAL SECTION:** This section is used to record time information at part removal.  
Date: Enter date of part removal.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part removal.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of removal.
8. **REMARKS:** This space is available for relevant supporting information or additional comments.



# SECTION 3 PART II

# LIFE LIMITED PARTS RECORD

This record to remain with part listed.	1. LIFE LIMIT	HOURS:	CYCLES:
2. PART NAME:	3. PART NUMBER:		4. SERIAL NUMBER:
5. ASSEMBLY IDENTIFICATION NAME:	6. PART INSTALLATION SECTION		7. PART REMOVAL SECTION
PART NUMBER	DATE	ASSY TOTAL HOURS	PART TOTAL HOURS
SERIAL NUMBER		CYCLES	CYCLES
8. REMARKS			

**ROLLS-ROYCE CORPORATION  
ENGINE LOGBOOK INSTRUCTIONS  
LIFE LIMITED PARTS RECORD**

GT-10047-1

1. **LIFE LIMIT:** Enter the accumulated life limit (hours or cycles) as listed in the Engine Maintenance Manual.
2. **PART NAME:** Enter name of part.
3. **PART NUMBER:** Enter part number.
4. **SERIAL NUMBER:** Enter part serial number.
5. **ASSEMBLY IDENTIFICATION:** This section identifies the assembly on which the part is installed or removed..  
Name: Enter name of assembly on which part is installed.  
Part Number: Enter assembly part number.  
Serial Number: Enter assembly serial number.
6. **PART INSTALLATION SECTION:** This section is used to record time information at part installation.  
Date: Enter date of part installation.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part installation.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of installation.
7. **PART REMOVAL SECTION:** This section is used to record time information at part removal.  
Date: Enter date of part removal.  
Assembly Total Hours and Cycles: Enter total accumulated assembly hours and cycles at part removal.  
Part Total Hours and Cycles: Enter total accumulated part hours and cycles at time of removal.
8. **REMARKS:** This space is available for relevant supporting information or additional comments.

