

Item#	ATA Name	Position	Description	Part No	Serial	Keyword	Installed Date	Installed Hours	Installed Cycles
XO-APU-WPC	000		APU WARRANTY & PROGRAM COVERAGE	PN	SN-UNKNOWN	UNKNOWN			
XO-ENGINE-WPC	000	ENGINE NO.1	ENGINE NO.1 WARRANTY & PROGRAM COVERAGE	PN	SN-UNKNOWN	UNKNOWN			
XO-ENGINE-WPC	000	ENGINE NO.2	ENGINE NO.2 WARRANTY & PROGRAM COVERAGE	PN	SN-UNKNOWN	UNKNOWN			
XO-PARTS-WPC	000		PARTS WARRANTY & PROGRAM COVERAGE	PN	SN-UNKNOWN	UNKNOWN			
12-10-66-6401	012		APU - AUXILIARY POWER UNIT OIL AND FILTER ASSEMBLY SERVICING	3608765-1	NSN	-	02/12/2024	9764	
12-10-66-6400	012		APU - 3882400-1 AUXILIARY POWER UNIT FUEL FILTER ELEMENT DISCARD	3882440-1	N/A	FUEL FILTER, APU	08/16/2024	9866	
216021	021		WARM AIR BAGGAGE FAN	011598-501	C06340101	FAN	07/28/2007	0	0
215002	021	CABIN	CABIN TURBO COMPRESSOR	101-3561-1	2016102837	COMPRESSOR	11/20/2019	13540.4	6553
215002	021	COCKPIT	COCKPIT TURBO COMPRESSOR	1013561-1	2015010013	AIR CYCLE MACHINE	01/08/2026	16158.4	7709
213103	021		SECONDARY OUTFLOW VALVE	103676-3	34-A0260	SECONDARY OUTFLOW VALVE	03/27/2023	15352.7	7331
213105	021		PRESSURE ISOLATION VALVE	103790-2	118-B0105	VALVE	02/22/2022	14583.98	7000
212001	021		WEMAC BOOST FAN	1133380-1(SEE	316	BLOWER **	08/23/2013	6646.48	3359
216009	021	LEFT CABIN	LEFT CABIN TEMPERATURE SWITCH	1173T42	3283	SWITCH	07/28/2007	0	0
216009	021	RIGHT CABIN	RIGHT CABIN TEMPERATURE SWITCH	1173T42	3286	SWITCH	07/28/2007	0	0
216001	021		TEMPERATURE CONTROL SELECTOR	1E45-13	12AR43	SELECTOR	04/01/2021	13809.67	6681
213210	021		PRESSURE ANEROID VALVE	2119848-3	128-C0280	VALVE	11/12/2021	14257.6	6868
212501	021	LEFT	LEFT AHRS FAN	26012423-105	8093	BLOWER	07/28/2007	0	0

212501	021	RIGHT	RIGHT AHRS FAN	26012423-105	8094	BLOWER	07/28/2007	0	0
216121	021	LEFT	LEFT TEMPERATURE CONTROL VALVE	27241287-10	7BB24	CONTROL VALVE	10/07/2019	13449.38	6507
216121	021	RIGHT	RIGHT TEMPERATURE CONTROL VALVE	27241287-10	7BB25	CONTROL VALVE	10/07/2019	13449.38	6507
213008	021		SOLENOID PRESSURE VALVE	5303-2A	5153A	VALVE	02/28/2020	13805.13	6680
216007	021	LEFT	LEFT B/A NK113 MODULE	6718459-19	0280	MODULE ASSY, BLEED AIR CONTROL	07/28/2007	0	0
216007	021	RIGHT	RIGHT B/A NK114 MODULE	6718459-19	0281	MODULE ASSY, BLEED AIR CONTROL	07/28/2007	0	0
216005-1	021	LEFT	LEFT B/A NK115 MODULE	6718473-5	0533	PCB ASSEMBLY-BLD MONITOR	07/28/2007	0	0
216005	021	RIGHT	RIGHT B/A NK116 MODULE	6718473-5	0534	PCB ASSEMBLY-BLD MONITOR	07/28/2007	0	0
215004	021	CABIN	CABIN REFRIGERATION PACKAGE	738443-26	2006100816	PACKAGE	10/14/2016	10180.82	5001
215004	021	COCKPIT	COCKPIT REFRIGERATION PACKAGE	738443-26	2007030515	PACKAGE	05/18/2017	10828.85	5284
215012	021	COCKPIT	COCKPIT DUAL HEAT EXCHANGER	744205-10	NSN	HEAT EXCHANGER	07/28/2007	0	0
215012	021	CABIN	CABIN DUAL HEAT EXCHANGER	744205-10	NSN	HEAT EXCHANGER	07/28/2007	0	0
215014	021	COCKPIT	COCKPIT COMPRESSOR OVERTEMP SWITCH	746833-2	NSN	SWITCH	07/28/2007	0	0
215014	021	CABIN	CABIN COMPRESSOR OVERTEMP SWITCH	746833-2	NSN	SWITCH	07/28/2007	0	0
216117	021	RIGHT	RIGHT ACM TEMPERATURE SENSOR	9912069-14	N0180	SENSOR	07/28/2007	0	0
216117	021	LEFT	LEFT ACM TEMPERATURE SENSOR	9912069-14	N0181	SENSOR	07/28/2007	0	0

213014	021		RATE OF CLIMB INDICATOR	9914059-1	363285	INDICATOR	07/28/2007	0	0
213013	021		ALTITUDE/DIFFERENTIAL INDICATOR	9914060-1	23759	INDICATOR	07/28/2007	0	0
216105	021	LEFT	LEFT TEMP CONTROL	9914130-12	5BB8	TEMP CONTROL	07/28/2007	0	0
216105	021	RIGHT	RIGHT TEMP CONTROL	9914130-12	8BB11	TEMP CONTROL	07/28/2007	0	0
216115	021	RIGHT	RIGHT COCKPIT DUCT SENSOR	9914130-3	1BG11	SENSOR	09/23/2013	6751.13	3401
216115	021	LEFT	LEFT CABIN DUCT SENSOR	9914130-3	3BC51	SENSOR	07/28/2007	0	0
216017	021	LEFT	LEFT CABIN TEMPERATURE SENSOR	9914130-6	12BP82	SENSOR, FLT DECK	02/28/2020	13805.13	6680
216017	021	RIGHT	RIGHT COCKPIT TEMPERATURE SENSOR	9914130-6	3BT30	SENSOR, FLT DECK	08/13/2019	13293.22	6431
213104	021		MANUAL PRESSURE VALVE	9914183-12	106-1837	PRESSURE VALVE	10/29/2018	12431.17	6005
213102	021		PRIMARY OUTFLOW VALVE	9914183-14 (103678-3)	10-A0809	OUTFLOW VALVE	05/14/2021	13810.57	6682
213102A	021		PRIMARY OUTFLOW VALVE AIR FILTER	9914183-7	N/A	AIR FILTER	02/29/2024	15838.07	7548
213101	021		PRESSURE VACUUM REGULATOR	9914183-8	483D	REGULATOR	07/28/2007	0	0
213007	021		VACUUM JET EJECTOR	9914487-1	462205	EJECTOR	07/28/2007	0	0
213012	021		PRESSURE CONTROLLER	9914487-11	27F0153	CONTROLLER	07/28/2007	0	0
213111	021		PRESSURE SELECTOR	9914487-13	56C0392	SELECTOR	07/28/2007	0	0
216108	021	CABIN	CABIN TEMP CONTROLLER	9914495-4	06055797	TEMP CONTROLLER	07/28/2007	0	0
216108	021	COCKPIT	COCKPIT TEMP CONTROLLER	9914495-4	06123874	TEMP CONTROLLER	07/28/2007	0	0
215106	021	COCKPIT	COCKPIT WATER SEPARATOR	9914495-6	2006100928	WATER SEPARATOR	07/28/2007	0	0
215106	021	CABIN	CABIN WATER SEPARATOR	9914495-6	2006120035	WATER SEPARATOR	07/28/2007	0	0
211113	021	LEFT	LEFT BI LEVEL VALVE ASSEMBLY	9914504-1	0538	VALVE ASSEMBLY	07/28/2007	0	0
211113	021	RIGHT	RIGHT BI LEVEL VALVE ASSEMBLY	9914504-1	0562	VALVE ASSEMBLY	07/28/2007	0	0

210101	021	LEFT	LEFT OZONE CONVERTER ASSEMBLY	9914523-4	0447	CONVERTER ASSEMBLY	02/02/2008	650.9	344
210101	021	RIGHT	RIGHT OZONE CONVERTER ASSEMBLY	9914523-4	0580	CONVERTER ASSEMBLY	07/28/2007	0	0
210032	021		MAX COOL VT023 VALVE	9914536-6	10194	VALVE	08/07/2012	5414.15	2729
213001	021	LEFT	LEFT TLA DECODER NK109 MODULE	9914727-1	689	MODULE	07/28/2007	0	0
213001	021	RIGHT	RIGHT TLA DECODER NK110 MODULE	9914727-1	690	MODULE	07/28/2007	0	0
215110	021		ECU DIAGNOSTIC INTERFACE	F5-95-1	7BB6	INTERFACE	07/28/2007	0	0
215114	021	TT013	TT013 ENVIRONMENT CONTROL SENSOR	S101813PG	1062	SENSOR AY-RTD	07/28/2007	0	0
215114	021	TT011	TT011 ENVIRONMENT CONTROL SENSOR	S101813PG	2986	SENSOR AY-RTD	08/13/2019	13293.22	6431
215114	021	TT017	TT017 ENVIRONMENT CONTROL SENSOR	S101816PG	NSN	SENSOR, RESISTANCE THERMOMETE R	07/28/2007	0	0
221013	022	NO. 3	NO. 3 LEFT ELEVATOR SENSOR	3A1-276A	0644	POSITION SENSOR	07/28/2007	0	0
221013	022	NO. 4	NO. 4 RIGHT ELEVATOR SENSOR	3A1-276A	0649	POSITION SENSOR	07/28/2007	0	0
221015	022	RUDDER	RUDDER SENSOR	3A1-276A	A1459	POSITION SENSOR	07/28/2007	0	0
221011	022	NO. 2	NO. 2 RIGHT AILERON SENSOR	3A1-276A	A1472	POSITION SENSOR	07/28/2007	0	0
221011	022	NO. 1	NO. 1 LEFT AILERON SENSOR	3A1276A	A0509	SENSOR	06/30/2021	13890.82	6718
221001	022	AILERON	AILERON /ROLL SERVO	4006719-918	0610H482	SERVO	07/28/2007	0	0
221002	022	ELEVATOR	ELEVATOR SERVO	4006719-921	608H336	SERVO	07/28/2007	0	0
221005	022		FLIGHT GUIDANCE CONTROLLER	7011702-929	01091199	CONTROLLER	08/21/2016	9987.9	4901
221007	022	NO. 1	NO. 1 CONFIGURATION MODULE	7014940-901	027301 MODB	MODULE	07/28/2007	0	0

221007	022	NO. 2	NO. 2 CONFIGURATION MODULE	7014940-901	027302 MODB	MODULE	07/28/2007	0	0
225001	022	BOTTOM	BOTTOM YAW STAB COMPUTER	7022090-901	07010717	YSAC COMPUTER	03/02/2023	15310.27	7315
225001	022	TOP	TOP YAW STAB COMPUTER	7022090-901	07030721	YSAC COMPUTER	03/02/2023	15310.27	7315
231106	023	NO. 1	NO. 1 POWER AMPLIFIER COUPLER	064-01072-0101	2027	COUPLER	07/28/2007	0	0
231106	023	NO. 2	NO. 2 POWER AMPLIFIER COUPLER	064-01072-0101	2034	COUPLER	07/28/2007	0	0
231107	023	NO. 1	NO. 1 HF RECEIVER/EXCITER	064-01073-0101	1800	RECEIVER/EXCITER	07/28/2007	0	0
231107	023	NO. 2	NO. 2 HF RECEIVER-EXCITER	064-01073-0101	1871	RECEIVER/EXCITER	07/28/2007	0	0
231111	023	RIGHT	RIGHT COUPLER AMPLIFIER	064-01074-0101	1773	COUPLER, ANTENNA	07/28/2007	0	0
231111	023	LEFT	LEFT COUPLER AMPLIFIER	064-01074-0101	2250	COUPLER, ANTENNA	05/07/2011	3841.15	1970
231105	023	NO. 2	NO. 2 HF CONTROLLER	071-01605-0101	143	HF CONTROL UNIT	07/28/2007	0	0
231105	023	NO. 1	NO. 1 HF CONTROLLER	071-01605-0101	610	HF CONTROL UNIT	07/28/2007	0	0
232001	023		SELCAL TRANSCEIVER	1200008-000	5095	SELCAL DECODER	07/28/2007	0	0
230000	023		CVR RECORDER	2100-1020-02	000442672	RECORDER, COCKPIT VOICE	09/10/2019	13379.17	6468
232002	023		CONF AFIS MODULE	31990-1	11740	MODULE	07/28/2007	0	0
237004	023		CVR GRAVITY SWITCH	6895D1-X-5-5	6504	SWITCH	07/28/2007	0	0
238003	023	NO. 1	NO. 1 RADIO MANAGEMENT UNIT	7013270-973	08056338	RMU	12/18/2019	13626.12	6599
238003	023	NO. 2	NO. 2 RADIO MANAGEMENT UNIT	7013270-973	11128020	RMU	11/03/2019	13518.23	6539
238013	023	NO. 1	NO. 1 INTEGRATED NAV UNIT	7510100-731	01065619	NAVIGATION UNIT W/ADF	09/29/2016	10134.88	4973
238013	023	NO. 2	NO. 2 INTEGRATED NAV UNIT	7510100-733	97082331	NAVIGATION UNIT	09/19/2016	10102.5	4956

238015	023	NO. 1	NO. 1 ADF RECEIVER	7510114-901	01064725	ADF MODULE, DF850	09/29/2016	10134.88	4973
238017	023	NO. 1	NO. 1 NAV RECEIVER	7510134-731	01055825	RECEIVER, NAV MODULE	09/29/2016	10134.88	4973
238017	023	NO. 2	NO. 2 NAV RECEIVER	7510134-731	97082503	RECEIVER, NAV MODULE	09/19/2016	10102.5	4956
238019	023	NO. 1	NO. 1 NAV CLUSTER MODULE	7510164-921	01065797	MODULE	09/29/2016	10134.88	4973
238019	023	NO. 2	NO. 2 NAV CLUSTER MODULE	7510164-921	97082392	MODULE	09/19/2016	10102.5	4956
238021	023	NO. 1	NO. 1 DME MODULE	7510184-902	01065496	DM850 MOD	09/29/2016	10134.88	4973
238021	023	NO. 2	NO. 2 DME MODULE	7510184-902	97082216	DM850 MOD	09/19/2016	10102.5	4956
238005	023	NO. 2	NO. 2 INTEGRATED COMM UNIT	7510733-666	00085531	RCZ-833M COMM UNIT	04/01/2021	13809.67	6681
238005	023	NO. 1	NO. 1 INTEGRATED COMM UNIT	7510733-666	05089476	RCZ-833M COMM UNIT	07/01/2019	13167.7	6364
238007	023	NO. 2	NO. 2 VHF COMM TRANSCEIVER	7510763-901	05087103	TRANSCEIVER	04/01/2021	13809.67	6681
238007	023	NO. 1	NO. 1 VHF COMM TRANSCEIVER	7510763-901	05087103	TRANSCEIVER	07/01/2019	13167.7	6364
238009	023	NO. 1	NO. 1 COMM CLUSTER MODULE	7510784-839	129340711	MODULE	07/01/2019	13167.7	6364
238009	023	NO. 2	NO. 2 COMM CLUSTER MODULE	7510784-839	129340711	MODULE	04/01/2021	13809.67	6681
235001	023	NO. 1	NO. 1 AUDIO CONTROL PANEL	7511001-917	0709C322	AUDIO CONTROL PANEL	04/12/2018	11905.17	5771
235001	023	NO. 2	NO. 2 AUDIO CONTROL PANEL	7511001-917	99124699	AUDIO CONTROL PANEL	11/22/2023	15639.32	7460
238001	023		CLEARANCE DEL CONTROL	7513000-835	06113387	CONTROL	07/28/2007	0	0
238011	023	NO. 2	NO. 2 TRANSPONDER	7517400-932	05089483	TRANSPONDE R	04/01/2021	13809.67	6681
238011	023	NO. 1	NO. 1 TRANSPONDER	7517400-932	05089483	TRANSPONDE R	07/01/2019	13167.7	6364

230005A	023		CVR ACOUSTIC BEACON BATTERY	810-2008/K	N/A	KIT, BATTERY, 30 DAYS ULB, REPLACEMENT	08/16/2024	15918.85	7586
235014	023	LEFT	LEFT TONE AUDIO WARNING	9915001-1	001000716	WARNING UNIT	07/28/2007	0	0
235014	023	RIGHT	RIGHT TONE AUDIO WARNING	9915001-1	001000721	WARNING UNIT	07/31/2014	7758.95	3848
230005	023		CVR UNDERWATER LOCATOR BEACON	DK120	SD09043	BEACON, UNDERWATER LOCATOR, ACOUSTIC	09/10/2019	13379.17	6468
231124	023		AIR CELL TRANSCEIVER	P12023	1202310681	TRANSCEIVER	06/29/2010	2877.6	1507
231123	023		TRANSCEIVER ROUTER	P12083	1208310251	ROUTER, CABIN TELECOM (AXCESS CTR)	06/29/2010	2877.6	1507
231504	023	LEFT	LEFT CABIN FLITEPHONE HANDSET	P12192-002	1219236950	HANDSET, FLUSHMOUNT, BEIGE	07/01/2019	13167.7	6364
231504	023	RIGHT	RIGHT CABIN FLITEPHONE HANDSET	P12192-002	1219237151	HANDSET, FLUSHMOUNT, BEIGE	07/01/2019	13167.7	6364
231505	023	COCKPIT	COCKPIT FLITEPHONE HANDSET	P12192-002 REV T	1219239345	HANDSET	05/14/2021	13810.57	6682
232018	023	FORWARD	FORWARD REMOTE DIVERSITY ANTENNA	P12344	N/A	ANTENNA	05/14/2021	13810.57	6682
232019	023	AFT	AFT REMOTE DIVERSITY ANTENNA	P12344	N/A	ANTENNA	05/14/2021	13810.57	6682
232012	023	AFT	AFT ATG ANTENNA	P12949	706882	ANTENNA	06/07/2023	15414.62	7359
232010	023	FORWARD	FORWARD ATG ANTENNA	P12949 REV N	646320	ANTENNA	05/14/2021	13810.57	6682
232014	023		ATG TRANSCEIVER	P13989	1398910769	TRANSCIEVER, ATG-4000	11/15/2022	15189.3	7261

232016	023		ATG CONFIGURATION MODULE	P14126	1412610367	AXCESS CONFIGURATI ON MODULE	06/29/2010	2877.6	1507
236002	023		AIRSHOW UNIT	PN	NOT INSTALLED	-	06/07/2023	15414.62	7359
236003	023		AIRSHOW COCKPIT CONTROLLER	PN	NOT INSTALLED	-	06/07/2023	15414.62	7359
236004	023		COCKPIT AIRSHOW MONITOR	PN	NOT INSTALLED	-	06/07/2023	15414.62	7359
230001	023		CVR MICROPHONE	S055-0065-00	000416115	RECORDER	07/28/2007	0	0
230003	023		CVR CONTROLLER	S251-1120-00	000125967	CONTROLLER, CVR	09/09/2019	13372.63	6466
231103	023	NO. 1	NO. 1 TOP VHF COMM ANTENNA	S65-8280-18	312-3612	VHF, ANTENNA	03/02/2018	11746.32	5700
232003	023		AFIS ANTENNA	S65-8280-18	312-3613	VHF, ANTENNA	03/02/2018	11746.32	5700
231103	023	NO. 2	NO. 2 VHF COMM ANTENNA	S65-8280-18	312-4970	VHF, ANTENNA	06/07/2023	15414.62	7359
244001	024		OVERVOLTAGE DETECTOR	1645-1-3	3447	SENSOR	07/28/2007	0	0
245309	024	LEFT	LEFT SQUAT NC009 MODULE	6718274-1	0934	LOGIC MODULE NK 111	07/28/2007	0	0
245309	024	RIGHT	RIGHT SQUAT NC010 MODULE	6718274-1	0935	LOGIC MODULE NK 111	07/28/2007	0	0
245311	024	LEFT	LEFT SQUAT NK111 MODULE	6718274-1	0936	LOGIC MODULE NK 111	07/28/2007	0	0
245312	024	RIGHT	RIGHT SQUAT NK112 MODULE	6718274-1	0937	LOGIC MODULE NK 111	07/28/2007	0	0
245314	024	RIGHT	RIGHT START CONTROL LOGIC NK106 MODULE	6718481-19	0135	SPLIT BUS START ASSY	07/22/2008	1167.2	622
245313	024	LEFT	LEFT START CONTROL LOGIC NK105 MODULE	6718481-19	0484	SPLIT BUS START ASSY	04/20/2022	14730.45	7061
242003	024	NO. 1	NO. 1 ALT CURRENT GENERATOR	90032-2	372	AC GENERATOR	09/05/2017	11160.33	5431

243002	024		APU DC GENERATOR CONTROL	92746-3	337-M	GCU (ORDER P/N 9914752-6)	11/20/2023	15636.95	7459
243003	024	NO. 1	NO. 1 DC GENERATOR	92841-1	192	GENERATOR	06/13/2015	8797.55	4336
243401	024	LEFT	LEFT MAIN SHIP BATTERY	9914058-6	10303921	BATTERY, NICAD MAIN	02/29/2024	15838.07	7548
243401	024	RIGHT	RIGHT MAIN SHIP BATTERY	9914058-6	12201769	BATTERY, NICAD MAIN	02/29/2024	15838.07	7548
242001	024	NO. 2	NO. 2 AC POWER CONTROL UNIT	9914216-2	1532	POWER CONTROL UNIT	07/28/2007	0	0
242001	024	NO. 1	NO. 1 AC POWER CONTROL UNIT	9914216-2	1571	POWER CONTROL UNIT	06/19/2014	7674.28	3810
242003	024	NO. 2	NO. 2 ALT CURRENT GENERATOR	9914435-4	205	ALTERNATOR	08/17/2015	8911.52	4397
243003	024	NO. 2	NO. 2 DC GENERATOR	9914752-1	073	DC GENERATOR	04/28/2022	14751.08	7072
243001	024		APU 400 AMP GENERATOR	9914752-1	263C	DC GENERATOR	03/11/2024	15848.52	7554
243005	024	LEFT	LEFT DC GENERATOR CONTROL	9914752-6	0475-M	GENERATOR CONTROL UNIT	05/21/2022	14806.97	7096
243005	024	RIGHT	RIGHT DC GENERATOR CONTROL	9914752-6	249M	GENERATOR CONTROL UNIT	04/28/2022	14751.08	7072
256075	025		#9 SEAT SWITCH PANEL	101007-8-603	6130106	CONTROL BEZEL	02/29/2012	4883.13	2482
250015	025		SECONDARY FLIGHT DISPLAY	105046-2	960208	DUAL DVD PLAYER (AUTO CONFIG.)	01/25/2020	13769.87	6662
256005	025		CHIME CONTROLLER	106038-1	2720306	CHIME GENERATOR	02/15/2019	12747.1	6166
253005	025		FAUCET ASSEMBLY	106102-1	560407	FAUCET ASSY	04/01/2021	13809.67	6681
256003	025		ELT ANTENNA	110-340	127956	ANTENNA	07/28/2007	0	0

25-11-CREW SEAT CUSHIONS	025		REPLACE PILOT AND COPILOT SEAT CUSHION WITH NEW CUSHIONS P/N: 1C7038-21	1C7038-21	N/A	SEAT CUSHION	04/20/2022	14730.45	7061
256035	025		MICROWAVE	400-1409-02-L	06-02-38454	MICROWAVE	04/01/2021	13809.67	6681
256004	025		ELT LOCATOR BEACON BATTERY	452-0133	1019179-005	ARTEX ELT BATTERY	08/05/2025	15922.67	7589
256001	025		EMERGENCY LOCATOR TRANSMITTER ELT	453-5060	02916	TRANSMITTER	07/01/2019	13167.7	6364
256009	025	NO. 1	NO. 1 LIFE RAFT	46FASA-632-1-303	4SA-00681	LIFE RAFT	08/16/2024	15918.85	7586
256009	025	NO. 2	NO. 2 LIFE RAFT	46FASA-632-1-303	4UL-03938	LIFE RAFT	08/16/2024	15918.85	7586
256500	025		FIRST AID KIT	500097	032725011	FIRST AID KIT	05/13/2025	15922.67	7589
253001	025		COFFEE TANK	81366C0563-1150-0658	226/58552	COFFEE POT	04/20/2013	6255.83	3175
253001	025	GALLEY	GALLEY WATER TANK	81366C0563-1150-0658	294	COFFEE POT	02/15/2012	4825.38	2455
250012	025		DATA LOAD SWITCH BOX	9555008-2	N/A	BOX	02/04/2020	13804.55	6679
250006(10)	025	#10	#10 LIFE VEST	P01074--207	23060180400	BAD PN DONT ORDER	09/25/2023	15519.58	7406
250006(CP)	025	COPILOT	COPILOT LIFE VEST	P01074-103	23090730098	LIFE VEST (PASSENGER)	02/29/2024	15838.07	7548
250006(P)	025	PILOT	PILOT LIFE VEST	P01074-201WC	21070190017	LIFE VEST, CREW, TWIN-CELL, WHISTLE	02/29/2024	15838.07	7548
250006(8)	025	#8	#8 LIFE VEST	P01074-207	924228	LIFE VEST PASSENGER	03/15/2017	10646.87	5202
250006(7)	025	#7	#7 LIFE VEST	P01074-207	931412	LIFE VEST PASSENGER	03/15/2017	10646.87	5202
250006(LAV)	025	LAVATORY	LAVATORY LIFE VEST	P01074-207	931426	LIFE VEST PASSENGER	03/15/2017	10646.87	5202
250006(9)	025	#9	#9 LIFE VEST	P01074-207	931434	LIFE VEST PASSENGER	03/15/2017	10646.87	5202

250006(3)	025	#3	#3 LIFE VEST	P01074-207	940022	LIFE VEST PASSENGER	03/15/2017	10646.87	5202
250006(5)	025	#5	#5 LIFE VEST	P01074-207	941409	LIFE VEST PASSENGER	03/15/2017	10646.87	5202
250006(6)	025	#6	#6 LIFE VEST	P01074-207	941428	LIFE VEST PASSENGER	03/15/2017	10646.87	5202
250006(4)	025	#4	#4 LIFE VEST	P01074-207	941450	LIFE VEST PASSENGER	03/15/2017	10646.87	5202
250006	025	INFANT NO. 2	INFANT NO. 2 LIFE VEST	P0640-101	10100380016	LIFE VEST (INFANT)	05/13/2025	15922.67	7589
250006	025		INFANT LIFE VEST	P0640-101	10100380073	LIFE VEST (INFANT)	05/14/2021	13810.57	6682
251000	025	FORWARD	FORWARD 10.4 LCD MONITOR-	PN	NOT INSTALLED	-	06/07/2023	15414.62	7359
251002	025	NO. 4	NO. 4 CABIN MONITOR-	PN	NOT INSTALLED	-	06/07/2023	15414.62	7359
251002	025	NO. 3	NO. 3 CABIN MONITOR-	PN	NOT INSTALLED	-	06/07/2023	15414.62	7359
251002	025	NO. 2	NO. 2 CABIN MONITOR-	PN	NOT INSTALLED	-	06/07/2023	15414.62	7359
251002	025	NO. 1	NO. 1 CABIN MONITOR-	PN	NOT INSTALLED	-	06/07/2023	15414.62	7359
256500A	025		DEFIBRILLATOR (AED)	PN	NOT INSTALLED	-	12/08/2023	15708.98	7487
256500C	025		***LINE MX*** AED BATTERY	PN	NOT INSTALLED	-	12/08/2023	15708.98	7487
256500D	025		***LINE MX*** REPLACE SPARE BATTERY DEFIBRILLATOR (AED)	PN	NOT INSTALLED	-	12/08/2023	15708.98	7487
256500E	025		***LINE MX*** REPLACE PAD #1 DEFIBRILLATOR (AED)	PN	NOT INSTALLED	-	12/08/2023	15708.98	7487
256500F	025		***LINE MX*** REPLACE PAD #2 DEFIBRILLATOR (AED)	PN	NOT INSTALLED	-	12/08/2023	15708.98	7487
259099	025		REPLACE CARPET	PN	SN-UNKNOWN	UNKNOWN			
CAMPAIGN-023	025		VERIFICATION OF AIRFRAME ELT 15 HEX ID	PN	SN-UNKNOWN	-	05/17/2022	14788.03	7090

262004	026	APU	APU FIRE BOTTLE	30100033-3	39615A1	APU FIRE BOTTLE	04/01/2021	13809.67	6681
262001	026	AFT	AFT ENGINE FIRE BOTTLE	30700009-4	44618D1	FIRE BOTTLE	04/20/2022	14730.45	7061
262001	026	FORWARD	FORWARD ENGINE FIRE BOTTLE	30700009-4	59053D1	FIRE BOTTLE	04/20/2022	14730.45	7061
263008	026	LEFT NO. 2	LEFT NO. 2 AFT FIRE EXTINGUISHER CARTRIDGE	30903824-1	NSN	FIRE EXT SQUIB	02/29/2024	15838.07	7548
263012	026	RIGHT NO. 2	RIGHT NO. 2 AFT FIRE EXTINGUISHER CARTRIDGE	30903824-1	NSN	FIRE EXT SQUIB	02/29/2024	15838.07	7548
261004	026		SMOKE DETECTOR	72-111211-102	SN-UNKNOWN	DETECTOR	05/26/2011	3893.55	1993
261000	026	APU	APU FIRE DETECTION CONTROL	9912416-1	207650	SENSOR	07/28/2007	0	0
261003	026		FIRE DETECTION CONTROL	9914092-2	0887	FIRE DETECTION CONTROL UNIT	07/25/2014	7738.08	3837
261001	026	LEFT ENGINE	LEFT ENGINE FIRE DETECTION CONTROL	9914512-1	201756	DETECTOR ASSEMBLY CONTROL	07/28/2007	0	0
261001	026	RIGHT ENGINE	RIGHT ENGINE FIRE DETECTION CONTROL	9914512-1	204113	DETECTOR ASSEMBLY CONTROL	05/19/2018	12055.02	5841
262010	026	LEFT	LEFT FIRE TRAY NK119 MODULE	9914732-1	650	MODULE	07/28/2007	0	0
262010	026	RIGHT	RIGHT FIRE TRAY NK120 MODULE	9914732-1	651	MODULE	07/28/2007	0	0
263010	026	RIGHT NO. 1	RIGHT NO. 1 FORWARD FIRE EXTINGUISHER CARTRIDGE	AE30903824	262	FIRE EXT SQUIB	03/02/2023	15310.27	7315
263006	026	LEFT NO. 1	LEFT NO. 1 FORWARD FIRE EXTINGUISHER CARTRIDGE	AE30903824	288	FIRE EXT SQUIB	03/02/2023	15310.27	7315
262003	026	FORWARD CLOSET	FORWARD CLOSET PORTABLE FIRE EXTINGUISHER	C352TS	I-48488814	COCKPIT FIRE EXTINGUISHER, HAND-HELD, CIT X	02/10/2025	15922.67	7589

262003	026	CO-PILOT	COPILOT PORTABLE FIRE EXTINGUISHER	C352TS	I-48488815	COCKPIT FIRE EXTINGUISHER, HAND-HELD, CIT X	02/10/2025	15922.67	7589
263004	026		APU FIRE EXTINGUISHER CARTRIDGE	M13083-5	45059	SQUIB	04/01/2021	13809.67	6681
273003	027	RIGHT	RIGHT CONTROL COLUMN SHAKER	201	7339	SHAKER	07/28/2007	0	0
273003	027	LEFT	LEFT CONTROL COLUMN SHAKER	201	7342	SHAKER	07/28/2007	0	0
274103	027		HORIZONTAL STABILIZER SECONDARY PITCH TRIM SWITCH	306-5314	N/A	TRIM SWITCH, SECONDARY PITCH, CIT X	03/04/2019	12792.87	6193
274002	027		HORIZONTAL STABILIZER SENSOR	3G5-212C	0315	SENSOR	07/28/2007	0	0
274010	027		HORIZONTAL STABILIZER ACTUATOR	4002-0026-3	NSN	ACTUATOR	07/28/2007	0	0
274003	027	LEFT	LEFT HORIZONTAL STABILIZER MOTOR	4119-0011-5	04E17199	MOTOR	07/28/2007	0	0
274003	027	RIGHT	RIGHT HORIZONTAL STABILIZER MOTOR	4119-0011-5	04E17201	MOTOR	07/28/2007	0	0
274007	027	LEFT	LEFT HORIZONTAL STABILIZER BRAKE	4206-0008-3	543	BRAKE	07/28/2007	0	0
274007	027	RIGHT	RIGHT HORIZONTAL STABILIZER BRAKE	4206-0008-3	544	BRAKE	07/28/2007	0	0
274005	027	LEFT	LEFT HORIZONTAL STABILIZER CLUTCH	4208-0004-2	601	CLUTCH	07/28/2007	0	0
274005	027	RIGHT	RIGHT HORIZONTAL STABILIZER CLUTCH	4208-0004-2	605	CLUTCH	07/28/2007	0	0
275013	027		SOFT START MODULE	6238405-30	NSN	MODULE	07/28/2007	0	0
275010	027	LEFT	LEFT FLAP/SLAT SEQUENCER NC001 MODULE	6718150-15	0181	LOGIC MODULE, FLAP/SLAT SEQUENCER	07/28/2007	0	0

275010	027	RIGHT	RIGHT FLAP/SLAT SEQUENCER NC004 MODULE	6718150-15	0182	LOGIC MODULE, FLAP/SLAT SEQUENCER	07/28/2007	0	0
275015	027	LEFT	LEFT FLAP RESOLVER CONVERTER	6718323-5	0325	CONVERTER ASSY, FLAP RESOLVER	11/03/2019	13518.23	6539
275015	027	RIGHT	RIGHT FLAP RESOLVER CONVERTER	6718323-5	0330	CONVERTER ASSY, FLAP RESOLVER	11/03/2019	13518.23	6539
275003	027		FLAP CONTROLLER	6718328-1	302	FLAP CONTROLLER	11/11/2019	13530.8	6545
272013	027		PCU MONITOR LOGIC NK121 MODULE	6718458-5	0188	MODULE	07/28/2007	0	0
272002	027		UPPER RUDDER LMT NK123 MODULE	6718464-5	0716	PCB ASSY, RUDDER LIMIT	07/28/2007	0	0
272002	027	RIGHT	RIGHT LOWER RUDDER LMT NK124 MODULE	6718464-5	0721	PCB ASSY, RUDDER LIMIT	07/28/2007	0	0
272001	027		ELEVATOR PITCH NK122 MODULE	6718476-11	0292	LOGIC MODULE	01/30/2008	638.2	338
278013	027	LEFT	LEFT ASSEMBLY SLAT	6725400-5	0284P	SLAT, LEFT HAND	01/08/2026	16158.4	7709
278013	027	RIGHT	RIGHT ASSEMBLY SLAT	6725400-6	0187P	SLAT, RIGHT HAND	04/28/2024	15914.07	7583
274014	027		HSTA FILTER ASSEMBLY	6738021-9	ICE-00325	MODULE	11/12/2014	8096.98	4019
274012	027	PRIMARY	PRIMARY HORIZONTAL STABILIZER TRIM CONTROLLER	6738022-7	ICE-00457	MODULE	11/12/2014	8096.98	4019
274013	027	SECONDARY	SECONDARY HORIZONTAL STABILIZER TRIM CONTROLLER	6738022-7	ICE-00458	MODULE	11/12/2014	8096.98	4019
271103	027		AILERON BUNGEE	6760149-9	298	BUNGEE	07/28/2007	0	0
271206	027		SPOILER MIXER BOX	6760260-3	10252	MIXTURE CONTROL BOX	07/28/2007	0	0

271101	027		RUDDER COMMAND BUNGEE	6760446-1	443	BUNGEE	09/30/2011	4346.97	2203
278001	027	LEFT WING RIGHT INBOARD	LEFT WING RIGHT INBOARD SLAT ACTUATOR	6763505-5	1472	ACTUATOR	07/28/2007	0	0
278001	027	LEFT WING LEFT OUTBOARD	LEFT WING LEFT OUTBOARD SLAT ACTUATOR	6763505-5	1500	ACTUATOR	07/28/2007	0	0
278001	027	RIGHT WING RIGHT INBOARD	RIGHT WING RIGHT INBOARD SLAT ACTUATOR	6763505-5	1501	ACTUATOR	07/28/2007	0	0
278001	027	RIGHT WING LEFT OUTBOARD	RIGHT WING LEFT OUTBOARD SLAT ACTUATOR	6763505-5	1502	ACTUATOR	07/28/2007	0	0
278001	027	LEFT WING RIGHT OUTBOARD	LEFT WING RIGHT OUTBOARD SLAT ACTUATOR	6763505-5	1506	ACTUATOR	07/28/2007	0	0
278001	027	RIGHT WING RIGHT OUTBOARD	RIGHT WING RIGHT OUTBOARD SLAT ACTUATOR	6763505-5	1511	ACTUATOR	07/28/2007	0	0
278001	027	RIGHT WING LEFT INBOARD	RIGHT WING LEFT INBOARD SLAT ACTUATOR	6763505-5	1512	ACTUATOR	07/28/2007	0	0

278001	027	LEFT WING LEFT INBOARD	LEFT WING LEFT INBOARD SLAT ACTUATOR	6763505-5	1513	ACTUATOR	07/28/2007	0	0
272401	027	NO. 1	NO. 1 LINEAR ACTUATOR	7002800-901	01061704	ACTUATOR	04/08/2024	15893.52	7575
272401	027	NO. 2	NO. 2 LINEAR ACTUATOR	7002800-901	98091188	ACTUATOR	04/27/2024	15914.07	7583
271204	027	LEFT	LEFT SPOILER SL019 SWITCH	8-405-04	B85266	PROXIMITY SWITCH	07/19/2022	14931.5	7156
271204	027	RIGHT	RIGHT SPOILER SR020 SWITCH	8-405-04	B86958	PROXIMITY SWITCH	01/21/2024	15768.4	7513
278015	027		SLAT CONTROL VALVE	8206-2	163	VALVE	05/13/2022	14780.3	7087
272403	027		UPPER YAW DAMPER BOX	9519007-2	383	UPPER YAW MODULE	07/28/2007	0	0
272601	027		RUDDER TRIM INDICATOR	96300000-04	0033	RUDDER TRIM INDICATOR	06/15/2022	14870.32	7123
275318	027	RIGHT NO. 6	RIGHT NO. 6 FLEX SHAFT	9914344-21	0260	FLEX DRIVE CABLE	07/28/2007	0	0
275318	027	RIGHT NO. 1	RIGHT NO. 1 FLEX SHAFT	9914344-22	508	SHAFT ASSY, FLEX DRIVE	07/28/2007	0	0
275217	027	LEFT NO. 3	LEFT NO. 3 FLEX SHAFT	9914344-24	490	FLAP FLEX CABLE	07/28/2007	0	0
275318	027	RIGHT NO. 3	RIGHT NO. 3 FLEX SHAFT	9914344-24	491	FLAP FLEX CABLE	07/28/2007	0	0
275217	027	LEFT NO. 6	LEFT NO. 6 FLEX SHAFT	9914344-25	0279	FLEX DRIVE CABLE	07/28/2007	0	0
275318	027	RIGHT NO. 2	RIGHT NO. 2 FLEX SHAFT	9914344-42	0376	FLEX SHAFT ASSY	05/13/2025	15922.67	7589
275217	027	LEFT NO. 2	LEFT NO. 2 FLEX SHAFT	9914344-42	0383	FLEX SHAFT ASSY	05/13/2025	15922.67	7589
275318	027	RIGHT NO. 4	RIGHT NO. 4 FLEX SHAFT	9914344-44	0150	FLEX SHAFT ASSY	08/07/2010	2929.5	1530
275217	027	LEFT NO. 4	LEFT NO. 4 FLEX SHAFT	9914344-44	0401	FLEX SHAFT ASSY	04/20/2022	14730.45	7061
275217	027	LEFT NO. 5	LEFT NO. 5 FLEX SHAFT	9914344-46	0552	FLEX SHAFT ASSY	06/07/2023	15414.62	7359

275318	027	RIGHT NO. 5	RIGHT NO. 5 FLEX SHAFT	9914344-46	08020074	FLEX SHAFT ASSY	05/08/2008	985.8	521
275217	027	LEFT NO. 1	LEFT NO. 1 FLEX SHAFT	9914344-47	22120254	FLEX SHAFT ASSY	06/07/2023	15414.62	7359
271001	027	RIGHT	RIGHT AILERON/AFT PCU	9914440-15	0463	PCU	06/07/2023	15414.62	7359
271001	027	LEFT	LEFT AILERON/FORWARD PCU	9914440-15	0654	PCU	08/20/2015	8911.52	4397
273405	027	RIGHT	RIGHT ELEVATOR INBOARD PCU	9914440-16	1111	PCU	07/28/2007	0	0
273405	027	LEFT	LEFT ELEVATOR INBOARD PCU	9914440-16	1113	PCU	07/28/2007	0	0
273403	027	LEFT	LEFT ELEVATOR OUTBOARD PCU	9914440-16	1117	PCU	07/28/2007	0	0
273403	027	RIGHT	RIGHT ELEVATOR OUTBOARD PCU	9914440-16	1120	PCU	07/28/2007	0	0
276200	027	LEFT OUTBOARD	LEFT OUTBOARD SPEEDBRAKE POWER CONTROL	9914441-10	2680	POWER CONTROL	07/28/2007	0	0
276200	027	RIGHT OUTBOARD	RIGHT OUTBOARD SPEEDBRAKE POWER CONTROL	9914441-10	2684	POWER CONTROL	07/28/2007	0	0
271205	027	LEFT OUTBOARD	LEFT OUTBOARD SPOILER POWER CONTROL	9914441-10	2689	POWER CONTROL	07/28/2007	0	0
276200	027	RIGHT CENTER	RIGHT CENTER SPEEDBRAKE POWER CONTROL	9914441-11	2663	CONTROL	07/28/2007	0	0
276200	027	LEFT CENTER	LEFT CENTER SPEEDBRAKE POWER CONTROL	9914441-11	2713	CONTROL	07/28/2007	0	0
271205	027	LEFT INBOARD	LEFT INBOARD SPOILER POWER CONTROL	9914441-12	2666	POWER CONTROL	07/28/2007	0	0
271205	027	RIGHT OUTBOARD	RIGHT OUTBOARD SPOILER POWER CONTROL	9914441-12	2678	POWER CONTROL	07/28/2007	0	0

276200	027	RIGHT INBOARD	RIGHT INBOARD SPEEDBRAKE POWER CONTROL	9914441-12	2720	POWER CONTROL	07/28/2007	0	0
271205	027	RIGHT INBOARD	RIGHT INBOARD SPOILER POWER CONTROL	9914441-12	2722	POWER CONTROL	07/28/2007	0	0
276200	027	LEFT INBOARD	LEFT INBOARD SPEEDBRAKE POWER CONTROL	9914441-12	2723	POWER CONTROL	07/28/2007	0	0
275201	027	RIGHT	RIGHT FLAP #1 ACTUATOR	9914502-1	2665	ACTUATOR	07/28/2007	0	0
275201	027	LEFT	LEFT FLAP #1 ACTUATOR	9914502-1	2667	ACTUATOR	07/28/2007	0	0
275205	027	RIGHT	RIGHT FLAP #3 ACTUATOR	9914502-1	2669	ACTUATOR	02/07/2014	7239.93	3621
275203	027	LEFT	LEFT FLAP #2 ACTUATOR	9914502-1	2670	ACTUATOR	07/28/2007	0	0
275203	027	RIGHT	RIGHT FLAP #2 ACTUATOR	9914502-1	2671	ACTUATOR	07/28/2007	0	0
275205	027	LEFT	LEFT FLAP #3 ACTUATOR	9914502-1	2674	ACTUATOR	07/28/2007	0	0
275207	027	LEFT	LEFT FLAP #4 ACTUATOR	9914502-2	1984	ACTUATOR	02/14/2013	6018.42	3041
275209	027	RIGHT	RIGHT FLAP #5 ACTUATOR	9914502-2	2106	ACTUATOR	07/28/2007	0	0
275209	027	LEFT	LEFT FLAP #5 ACTUATOR	9914502-2	2116	ACTUATOR	07/28/2007	0	0
275207	027	RIGHT	RIGHT FLAP #4 ACTUATOR	9914502-2	2118	ACTUATOR	07/28/2007	0	0
275211	027	RIGHT	RIGHT FLAP #6 ACTUATOR	9914502-3	1553	ACTUATOR	07/28/2007	0	0
275211	027	LEFT	LEFT FLAP #6 ACTUATOR	9914502-3	1554	ACTUATOR	07/28/2007	0	0
274001	027		HORIZONTAL STABILIZER TRIM ACTUATOR	9914509-17	365	TRIM ACTUATOR	07/28/2007	0	0
275001	027	NO. 1	NO. 1 FLAP POSITION SENSOR	9914510-4	A0016	SENSOR (SEE NOTES)	10/29/2019	13515.38	6537
275001	027	NO. 2	NO. 2 FLAP POSITION SENSOR	9914510-4	A4165	SENSOR (SEE NOTES)	11/03/2019	13518.23	6539
271010	027		VERTICAL STABILIZER LEADING EDGE	9914557-202	80	LEADING EDGE	09/30/2009	2090.7	1112
273303	027	RIGHT	RIGHT ELEVATOR ACTUATOR	9914558-10	327	ACTUATOR	10/26/2011	4446.33	2248
273303	027	LEFT	LEFT ELEVATOR ACTUATOR	9914558-10	427	ACTUATOR	10/26/2011	4446.33	2248
272011	027	TOP	TOP RUDDER LIMITER ACTUATOR	9914558-11	139	ACTUATOR ASSY	07/28/2007	0	0
272012	027	BOTTOM	BOTTOM RUDDER LIMITER ACTUATOR	9914558-11	140	ACTUATOR ASSY	07/28/2007	0	0
271003	027		AILERON TRIM ACTUATOR	9914558-8	252	ACTUATOR	07/28/2007	0	0
272004	027		RUDDER TRIM ACTUATOR	9914558-9	84	ACTUATOR	07/28/2007	0	0

276013	027	LEFT	LEFT SPEEDBRAKE POSITION SENSOR	9914584-1	1729	SENSOR, SPEEDBRAKE	12/02/2011	4557.32	2324
276013	027	RIGHT	RIGHT SPEEDBRAKE POSITION SENSOR	9914584-1	1733	SENSOR, SPEEDBRAKE	12/02/2011	4557.32	2324
272005	027		UPPER RUDDER ACTUATOR	9914600-3	0192	ACTUATOR, UPPER RUDDER	03/14/2023	15324.95	7319
271106	027		HYDRAULIC LINK B ACTUATOR	9914644-1	0451A	ACTUATOR	07/28/2007	0	0
271105	027		HYDRAULIC LINK A ACTUATOR	9914644-1	0464A	ACTUATOR	07/28/2007	0	0
276001	027		SPEED BRAKE NC008 MODULE	9914723-1	356	LOGIC MODULE, SPEED BRAKE	12/02/2011	4557.32	2324
274011	027		TRIM NK104 MODULE	9914726-2	443	MODULE	07/28/2007	0	0
275011	027		FLAP MONITOR NC005 MODULE	9914730-1	385	FLAP LOGIC CARD	07/28/2007	0	0
272009	027	TOP	TOP RUDDER PCU	B94516-3	0738	PCU	03/02/2018	11746.32	5700
272009	027	BOTTOM	BOTTOM RUDDER PCU	B94516-3	0739	PCU	03/02/2018	11746.32	5700
275213	027	RIGHT NO. 1	RIGHT NO. 1 FLAP GEARBOX	C144824-1	1057	GEARBOX	11/11/2019	13530.8	6545
275213	027	RIGHT NO. 2	RIGHT NO. 2 FLAP GEARBOX	C144824-1	1748	GEARBOX	11/11/2019	13530.8	6545
275213	027	LEFT NO. 2	LEFT NO. 2 FLAP GEARBOX	C144824-1	2112	GEARBOX	07/28/2007	0	0
275213	027	LEFT NO. 1	LEFT NO. 1 FLAP GEARBOX	C144824-1	2114	GEARBOX	07/28/2007	0	0
272501	027	RIGHT	RIGHT RUDDER POSITION SENSOR	H517A	J0208	SENSOR, UPPER RUDDER	07/28/2007	0	0
272501	027	LEFT	LEFT RUDDER POSITION SENSOR	H517A	J6653	SENSOR, UPPER RUDDER	07/28/2007	0	0

275004	027		FLAP POWER DRIVE UNIT	MP50G4	0910B	POWER DRIVE UNIT	12/23/2025	16136.9	7696
271207	027	CENTER INBOARD	CENTER INBOARD SPEED BRAKE CENTER HINGE FITTING BOLT	NAS6206-18D	NSN	BOLT	07/28/2007	0	0
271207	027	RIGHT OUTBOARD	RIGHT OUTBOARD SPEED BRAKE CENTER HINGE FITTING BOLT	NAS6206-18D	NSN	BOLT	07/28/2007	0	0
271207	027	RIGHT INBOARD	RIGHT INBOARD SPEED BRAKE CENTER HINGE FITTING BOLT	NAS6206-18D	NSN	BOLT	07/28/2007	0	0
271207	027	CENTER OUTBOARD	CENTER OUTBOARD SPEED BRAKE CENTER HINGE FITTING BOLT	NAS6206-18D	NSN	BOLT	07/28/2007	0	0
271207	027	LEFT INBOARD	LEFT INBOARD SPEED BRAKE CENTER HINGE FITTING BOLT	NAS6206-18D	NSN	BOLT	07/28/2007	0	0
271207	027	LEFT OUTBOARD	LEFT OUTBOARD SPEED BRAKE CENTER HINGE FITTING BOLT	NAS6206-18D	NSN	BOLT	07/28/2007	0	0
271201	027	LEFT INBOARD	LEFT INBOARD SPEED BRAKE PUSHROD BOLT	NAS6206C13D	NA	BOLT	04/20/2022	14730.45	7061
271201	027	RIGHT INBOARD	RIGHT INBOARD SPEED BRAKE PUSHROD BOLT	NAS6206C13D	NA	BOLT	04/20/2022	14730.45	7061
271202	027	RIGHT CENTER	RIGHT CENTER SPEED BRAKE PUSHROD BOLT	NAS6206C13D	NA	BOLT	04/20/2022	14730.45	7061
271202	027	LEFT CENTER	LEFT CENTER SPEED BRAKE PUSHROD BOLT	NAS6206C13D	NA	BOLT	04/20/2022	14730.45	7061
271203	027	LEFT OUTBOARD	LEFT OUTBOARD SPEED BRAKE PUSHROD BOLT	NAS6206C13D	NA	BOLT	04/20/2022	14730.45	7061
271203	027	RIGHT OUTBOARD	RIGHT OUTBOARD SPEED BRAKE PUSHROD BOLT	NAS6206C13D	NA	BOLT	04/20/2022	14730.45	7061
274009	027		HORIZONTAL STABILIZER CONTROL MODULE	REMOVED	REMOVED	AMPLIFIER	11/12/2014	8096.98	4019

274102	027	COPILOT	COPILOT HORIZONTAL STABILIZER PRIMARY PITCH TRIM SWITCH	S3860-1	NSN	SWITCH	05/23/2017	10851.4	5291
284009	028	LEFT	LEFT FUEL QUANTITY W5 PROBE	10478T15Y00	MN18910	PROBE	11/01/2023	15598.83	7444
284011	028	LEFT	LEFT FUEL QUANTITY W6 PROBE	10478T16Y00	0939	PROBE	10/06/2022	15118.15	7232
282009	028	LEFT	LEFT DEFUEL VALVE	61084-2	1356	VALVE	08/21/2019	13298.38	6435
282009	028	RIGHT	RIGHT DEFUEL VALVE	61084-2	1358	VALVE	08/21/2019	13298.38	6435
282011	028	CENTER	CENTER DEFUEL VALVE	61084-2	1359	VALVE	07/28/2007	0	0
282005	028	RIGHT	RIGHT HIGH LEVEL FUEL VALVE	61087	5820	VALVE	11/22/2011	4530.57	2288
282012	028		FUEL SEQUENCING VALVE	61632	283	VALVE	07/28/2007	0	0
281013	028	NO. 1	NO. 1 FUEL VENT VALVE	9912016-2	NSN	VALVE	07/28/2007	0	0
282051	028	LEFT INBOARD	LEFT INBOARD WING FUEL VALVE	9912501-2	4404XP	VALVE	07/28/2007	0	0
282052	028	RIGHT INBOARD	RIGHT INBOARD WING FUEL VALVE	9912501-2	4586XP	VALVE	07/28/2007	0	0
282052	028	RIGHT OUTBOARD	RIGHT OUTBOARD WING FUEL VALVE	9912501-2	4664XPR	VALVE	07/28/2007	0	0
282051	028	LEFT OUTBOARD	LEFT OUTBOARD WING FUEL VALVE	9912501-2	4671XPR	VALVE	07/28/2007	0	0
282005	028	LEFT	LEFT HIGH LEVEL FUEL VALVE	9914107-1	4376	VALVE	07/28/2007	0	0
282005	028	CENTER	CENTER HIGH LEVEL FUEL VALVE	9914107-1	4463	VALVE	07/28/2007	0	0
282013	028	CENTER	CENTER REFUEL VALVE	9914107-3	3198	VALVE	07/28/2007	0	0
282013	028	LEFT	LEFT REFUEL VALVE	9914107-3	4148	VALVE	08/21/2019	13298.38	6435
282013	028	RIGHT	RIGHT REFUEL VALVE	9914107-3	5471	VALVE	08/21/2019	13298.38	6435
284001	028	RIGHT	RIGHT FUEL QUANTITY W1 PROBE	9914422-1	MN06585	PROBE	07/28/2007	0	0
284001	028	LEFT	LEFT FUEL QUANTITY W1 PROBE	9914422-1	MN06588	PROBE	07/28/2007	0	0
284018	028	LEFT	LEFT FUEL QUANTITY C4 PROBE	9914422-10	MN06445	PROBE	07/28/2007	0	0

284019	028		FUEL QUANTITY SIGNAL PROCESSER	9914422-12	0425	PROCESSOR, SIGNAL	08/12/2023	15448.03	7376
284003	028	LEFT	LEFT FUEL QUANTITY W2 PROBE	9914422-2	MN05382	PROBE	07/28/2007	0	0
284003	028	RIGHT	RIGHT FUEL QUANTITY W2 PROBE	9914422-2	MN06819	PROBE	07/28/2007	0	0
284005	028	RIGHT	RIGHT FUEL QUANTITY W3 PROBE	9914422-3	MN06564	PROBE	07/28/2007	0	0
284005	028	LEFT	LEFT FUEL QUANTITY W3 PROBE	9914422-3	MN06722	PROBE	07/28/2007	0	0
284007	028	RIGHT	RIGHT FUEL QUANTITY W4 PROBE	9914422-4	MN06695	PROBE	07/28/2007	0	0
284007	028	LEFT	LEFT FUEL QUANTITY W4 PROBE	9914422-4	MN06697	PROBE	07/28/2007	0	0
284009	028	RIGHT	RIGHT FUEL QUANTITY W5 PROBE	9914422-5	MN05405	PROBE	07/28/2007	0	0
284011	028	RIGHT	RIGHT FUEL QUANTITY W6 PROBE	9914422-6	MN06599	PROBE	07/28/2007	0	0
284013	028	RIGHT	RIGHT FUEL QUANTITY W7 PROBE	9914422-7	MN05853	PROBE	07/28/2007	0	0
284013	028	LEFT	LEFT FUEL QUANTITY W7 PROBE	9914422-7	MN05854	PROBE	07/28/2007	0	0
284015	028	LEFT	LEFT FUEL QUANTITY C1 PROBE	9914422-8	MN06455	PROBE	07/28/2007	0	0
284017	028	RIGHT	RIGHT FUEL QUANTITY C3 PROBE	9914422-9	MN06178	PROBE	07/28/2007	0	0
284016	028	LEFT	LEFT FUEL QUANTITY C2 PROBE	9914422-9	MN07298	PROBE	07/28/2007	0	0
282037	028	LEFT NO. 3	LEFT NO. 3 FUEL SHUTOFF ACTUATOR	9914423-2	AA132843	ACTUATOR MOTOR	08/21/2016	9987.9	4901
282037	028	LEFT NO. 2	LEFT NO. 2 FUEL SHUTOFF ACTUATOR	9914423-2	AA754994	ACTUATOR MOTOR	08/23/2021	14059.53	6781
282037	028	RIGHT NO. 3	RIGHT NO. 3 FUEL SHUTOFF ACTUATOR	9914423-2	AA756923	ACTUATOR MOTOR	02/12/2022	14567.25	6992
282037	028	RIGHT NO. 2	RIGHT NO. 2 FUEL SHUTOFF ACTUATOR	9914423-2	AA95047	ACTUATOR MOTOR	07/28/2007	0	0

282037	028	LEFT NO. 1	LEFT NO. 1 FUEL SHUTOFF ACTUATOR	9914423-2	AA95057	ACTUATOR MOTOR	07/28/2007	0	0
282037	028	RIGHT NO. 1	RIGHT NO. 1 FUEL SHUTOFF ACTUATOR	9914423-2	AA95060	ACTUATOR MOTOR	07/28/2007	0	0
280011	028	LEFT	LEFT DEFUEL VALVE	9914423-4	100008	VALVE	07/28/2007	0	0
280011	028	RIGHT	RIGHT DEFUEL VALVE	9914423-4	100011	VALVE	07/28/2007	0	0
282044	028	CENTER LEFT	CENTER LEFT FUEL TRANSFER VALVE	9914423-4	AA724887	VALVE	08/23/2021	14059.53	6781
282044	028	LOWER LEFT	LOWER LEFT CROSSFLOW VALVE	9914423-4	AA85948	VALVE	07/28/2007	0	0
282043	028	LOWER RIGHT	LOWER RIGHT CROSSFEED VALVE	9914423-4	AA88151	VALVE	07/28/2007	0	0
282043	028	UPPER LEFT	UPPER LEFT FUEL FIREWALL VALVE	9914423-4	AA90539	VALVE	07/28/2007	0	0
282044	028	CENTER RIGHT	CENTER RIGHT FUEL TRANSFER VALVE	9914423-4	AA90540	VALVE	07/28/2007	0	0
282043	028	UPPER RIGHT	UPPER RIGHT FUEL FIREWALL VALVE	9914423-4	AA90546	VALVE	07/28/2007	0	0
282021	028	LEFT	LEFT SCAVENGER FUEL PUMP	9914424-2	561	FUEL PUMP	07/28/2007	0	0
282021	028	RIGHT	RIGHT SCAVENGER FUEL PUMP	9914424-2	562	FUEL PUMP	07/28/2007	0	0
282023	028	RIGHT	RIGHT TRANSFER FUEL PUMP	9914424-3	0601	FUEL PUMP	07/28/2007	0	0
282023	028	LEFT	LEFT TRANSFER FUEL PUMP	9914424-3	0717	FUEL PUMP	07/30/2015	8851.9	4362
282027	028	RIGHT	RIGHT PRIMARY EJECTOR FUEL PUMP	9914424-5	0584	VALVE	07/28/2007	0	0
282027	028	LEFT	LEFT PRIMARY EJECTOR FUEL PUMP	9914424-5	0766	VALVE	08/23/2021	14059.53	6781
282025	028	LEFT INBOARD	LEFT INBOARD TRANSFER FLOAT VALVE	9914424-6	1167	VALVE	07/28/2007	0	0
282026	028	RIGHT OUTBOARD	RIGHT OUTBOARD TRANSFER FLOAT VALVE	9914424-6	1167	VALVE	08/13/2019	13293.22	6431
282026	028	RIGHT INBOARD	RIGHT INBOARD TRANSFER FLOAT VALVE	9914424-6	1188	VALVE	07/28/2007	0	0

282025	028	LEFT OUTBOARD	LEFT OUTBOARD TRANSFER FLOAT VALVE	9914424-6	1331	VALVE	08/13/2019	13293.22	6431
281005	028	LEFT WING	LEFT WING FUEL LEVEL INDICATOR	9914426-4	43568	INDICATOR	07/28/2007	0	0
281005	028	RIGHT WING	RIGHT WING FUEL LEVEL INDICATOR	9914426-4	45839	INDICATOR	07/28/2007	0	0
281005	028	CENTER FORWARD	CENTER FORWARD FUEL LEVEL INDICATOR	9914426-5	43572	INDICATOR	07/28/2007	0	0
281005	028	CENTER AFT	CENTER AFT FUEL LEVEL INDICATOR	9914426-6	44821	INDICATOR	07/28/2007	0	0
282029	028	LEFT	LEFT MOTIVE SHUTOFF VALVE	9914470-4	0551	SOLENOID VALVE	09/06/2021	14065.63	6785
282029	028	RIGHT	RIGHT MOTIVE SHUTOFF VALVE	9914470-4	0552	SOLENOID VALVE	09/06/2021	14065.63	6785
284025	028	LEFT	LEFT FUEL PRESSURE SWITCH	9914488-2	2028016	PRESSURE SWITCH	09/06/2021	14065.63	6785
284025	028	RIGHT	RIGHT FUEL PRESSURE SWITCH	9914488-2	2028017	PRESSURE SWITCH	09/06/2021	14065.63	6785
284027	028	LEFT	LEFT MOTIVE FLOW PRESSURE SWITCH	9914488-3	2015684	SWITCH, PRESSURE	09/06/2021	14065.63	6785
281004	028	LEFT INBOARD	LEFT INBOARD CENTER TANK VALVE	9914505-1	1056	VALVE	07/28/2007	0	0
281004	028	RIGHT INBOARD	RIGHT INBOARD CENTER WING VALVE	9914505-1	1069	VALVE	07/28/2007	0	0
281004	028	RIGHT OUTBOARD	RIGHT OUTBOARD OUTER WING VALVE	9914505-1	1446	VALVE	06/07/2023	15414.62	7359
281004	028	LEFT OUTBOARD	LEFT OUTBOARD OUTER WING VALVE	9914505-3	1759	FLOAT VALVE, VENT	07/30/2015	8851.9	4362
282105	028	RIGHT	RIGHT FUEL CONTROL NK108 MODULE	9914739-1	649	LOGIC CARD NK108	04/01/2021	13809.67	6681
282105	028	LEFT	LEFT FUEL CONTROL NK107 MODULE	9914739-1	771	LOGIC CARD NK108	08/23/2021	14059.53	6781

282020	028		REFUEL VALVE ASSEMBLY	AV24A4001-1	AA88773	VALVE ASSEMBLY	07/28/2007	0	0
284027	028	RIGHT	RIGHT MOTIVE FLOW PRESSURE SWITCH	GPP1250-47/9914488-3	1845446	SWITCH	09/06/2021	14065.63	6785
282006	028	RIGHT OUTBOARD	RIGHT OUTBOARD OVERFULL FLOAT SWITCH	L16H-11	285	SWITCH	07/28/2007	0	0
282007	028	LEFT OUTBOARD	LEFT OUTBOARD OVERFULL FLOAT SWITCH	L16H-11	296	SWITCH	07/28/2007	0	0
282006	028	RIGHT INBOARD	RIGHT INBOARD LOW FUEL FLOAT SWITCH	L16H-11	303	SWITCH	07/28/2007	0	0
282007	028	LEFT INBOARD	LEFT INBOARD LOW FUEL FLOAT SWITCH	L16H-11	304	SWITCH	07/28/2007	0	0
282049	028	RIGHT	RIGHT BOOST PUMP CARTRIDGE	LR55385-3	B-359	CARTRIDGE - ELECTRIC FUEL BOOST PUMP	06/07/2023	15414.62	7359
282049	028	LEFT	LEFT BOOST PUMP CARTRIDGE	LR55385-3	B-461	CARTRIDGE - ELECTRIC FUEL BOOST PUMP	06/07/2023	15414.62	7359
282001	028	RIGHT	RIGHT ELECTRIC FUEL BOOST PUMP	RR55395	B-401	PUMP	06/07/2023	15414.62	7359
282001	028	LEFT	LEFT ELECTRIC FUEL BOOST PUMP	RR55395	B-594	PUMP	06/07/2023	15414.62	7359
280002	028	C2	C2 FUEL RELIEF VALVE	RV05-454	NSN	VALVE	07/28/2007	0	0
280002	028	C1	C1 FUEL RELIEF VALVE	RV05-454	NSN	VALVE	07/28/2007	0	0
292008	029		HYDRAULIC ACCUMULATOR	08-60187-001	601872022	ACCUMULATOR	07/28/2007	0	0
291005	029	LEFT	LEFT RESERVOIR BOOTSTRAP VALVE	1711084-003	00024	VALVE	07/07/2017	10982.93	5350
291039	029	LEFT	LEFT HYDRAULIC PRESSURE GAUGE	19940929-1	021504	GAUGE	07/28/2007	0	0
291039	029	RIGHT	RIGHT HYDRAULIC PRESSURE GAUGE	19940929-1	021506	GAUGE	07/28/2007	0	0

291004	029		ACCUMULATOR PRESSURE GAUGE	19940929-1	021507	GAUGE	07/28/2007	0	0
291027	029	RIGHT	RIGHT HYDRAULIC SENSOR	42RT100-3	M5550	SENSOR	07/28/2007	0	0
291027	029	LEFT	LEFT HYDRAULIC SENSOR	42RT100-3	W5875	SENSOR	07/28/2007	0	0
292001	029	LEFT	LEFT ENGINE DRIVEN HYDRAULIC PUMP	66166	BH401P	PUMP	09/17/2011	4307.75	2185
292001	029	RIGHT	RIGHT ENGINE DRIVEN HYDRAULIC PUMP	66166	CG820P	PUMP	09/18/2011	4307.75	2185
292005	029		RUDDER HYDRAULIC RESERVOIR	6707004-10	275	RESERVOIR	07/28/2007	0	0
292002	029		RUDDER STANDBY MANIFOLD	6707005-7	395	MANIFOLD	07/28/2007	0	0
290013	029		MANIFOLD ASSEMBLY SENSOR	6717277-1	262	SENSOR	07/28/2007	0	0
290014	029		HYDRAULIC MANIFOLD ASSEMBLY	6717277-3	344	MANIFOLD ASSEMBLY	07/28/2007	0	0
291001	029	RIGHT	RIGHT HDRAULIC SHUTOFF VALVE	9914453-1	AA102871	VALVE	07/28/2007	0	0
291001	029	LEFT	LEFT HYDRAULIC SHUTOFF VALVE	9914453-1	AA95749	VALVE	07/28/2007	0	0
291005	029	RIGHT	RIGHT RESERVOIR BOOTSTRAP VALVE	9914454-3	00600	RESERVOIR ASSY.	07/28/2007	0	0
291011	029		FAIRING RELIEF VALVE	9914457-1	284	VALVE	07/28/2007	0	0
291012	029		HYDRAULIC POWER TRANSFER UNIT	9914464-4	FAH0071	UNIT, POWER TRANSFER	07/28/2007	0	0
291000	029		HYDRAULIC FILTERS	9914465-3	N/A	FILTER ELEMENT	08/16/2024	15918.85	7586
291021	029	LEFT	LEFT HYDRAULIC ACCUMULATOR	9914467-1	0090T	ACCUMULATOR	08/13/2009	2002.3	1061
291021	029	RIGHT	RIGHT HYDRAULIC ACCUMULATOR	9914467-1	0117T	ACCUMULATOR	08/13/2009	2002.3	1061
291018	029	RIGHT	RIGHT AUX HYDRAULIC PUMP	9914469-3	461	PUMP	10/13/2007	274.4	147
291008	029		RUDDER SHUTOFF VALVE	9914483-2	1722	VALVE	07/28/2007	0	0
291009	029	LEFT	LEFT FAIRING SHUTOFF VALVE	9914483-2	1781	VALVE	07/28/2007	0	0

291009	029	RIGHT	RIGHT FAIRING SHUTOFF VALVE	9914483-2	1783	VALVE	07/28/2007	0	0
293002	029	LEFT	LEFT HYDRAULIC PRESSURE SWITCH	9914485-5	0701611	SWITCH	07/28/2007	0	0
293002	029	RIGHT	RIGHT HYDRAULIC PRESSURE SWITCH	9914485-5	0701617	SWITCH	07/28/2007	0	0
291023	029	RIGHT	RIGHT HYDRAULIC "B" TRANSDUCER	9914524-2	72183267	PRESSURE TRANSDUCER	07/28/2007	0	0
291023	029	LEFT	LEFT HYDRAULIC "A" TRANSDUCER	9914524-2	7218395	PRESSURE TRANSDUCER	07/28/2007	0	0
291050	029		RUDDER HYDRAULIC TRANSDUCER	9914524-2	8565-8-169	PRESSURE TRANSDUCER	02/16/2022	14570.98	6993
291025	029	RIGHT	RIGHT HYDRAULIC UNLOADING VALVE	9914593-1	586	VALVE	07/28/2007	0	0
291025	029	LEFT	LEFT HYDRAULIC UNLOADING VALVE	9914593-1	588	VALVE	07/28/2007	0	0
291015	029		HYDRAULIC POWER CONTROLLER	9914594-1	282	CONTROLLER, HYD POWER TRANSFER UNIT	07/28/2007	0	0
292009	029		RUDDER PUMP-MOTOR	9914614-2	405	PUMP-MOTOR	02/16/2022	14570.98	6993
304000	030	RIGHT	RIGHT B/A PRESSURE SWITCH	1103P0912	1129	SWITCH-PRESSURE	07/28/2007	0	0
304000	030	LEFT	LEFT B/A PRESSURE SWITCH	1103P0912	1258	SWITCH-PRESSURE	12/21/2010	3344	1735
304001	030	RIGHT	RIGHT WINDSHIELD TEMPERATURE CONTROLLER	856-1-3	207120092	CONTROLLER	09/07/2018	12294.67	5943
304001	030	LEFT	LEFT WINDSHIELD TEMPERATURE CONTROLLER	9914411-2	207050273	WINDSHIELD TEMP CONTROLLER	09/05/2018	12288.93	5940

301001	030	RIGHT	RIGHT PRESSURE REGULATOR VALVE	9914521-5	1480	VALVE, ANTI- ICE	07/28/2007	0	0
301001	030	LEFT	LEFT PRESSURE REGULATOR VALVE	9914521-5	1492	VALVE, ANTI- ICE	07/28/2007	0	0
301005	030	LEFT	LEFT B/A SHUTOFF VALVE	9914521-6	1504	VALVE	07/28/2007	0	0
301005	030	RIGHT	RIGHT B/A SHUTOFF VALVE	9914521-6	1510	VALVE	07/28/2007	0	0
301003	030	LEFT	LEFT PRESSURE REGULATOR VALVE	9914521-7	1489	VALVE	07/28/2007	0	0
301003	030	RIGHT	RIGHT PRESSURE REGULATOR VALVE	9914521-7	1490	VALVE	07/28/2007	0	0
301200	030	RIGHT	RIGHT WING SHUTOFF VALVE	9914536-3	1130	VALVE, SHUTOFF ENGINE BLEED	03/27/2009	1758.2	924
301200	030	LEFT	LEFT WING SHUTOFF VALVE	9914536-3	2012	VALVE, SHUTOFF ENGINE BLEED	07/28/2007	0	0
301023	030		(VL005) CROSSOVER VALVE	9914536-5	1900	VALVE	07/28/2007	0	0
301101	030	LEFT	LEFT WING ROOT FAIRING	9914612-3	020607001	FAIRING, LH	07/28/2007	0	0
301101	030	RIGHT	RIGHT WING ROOT FAIRING	9914612-4	010605-001	FAIRING, RH	03/19/2008	800.2	
302042	030		HORIZONTAL LEADING EDGE TH006 SENSOR	S101813PG	1062	SENSOR AY- RTD	07/28/2007	0	0
302038	030		ENGINE INLET TE002 SENSOR	S101813PG	1131	SENSOR AY- RTD	05/27/2009	1873.2	988
302041	030		HORIZONTAL LEADING EDGE TH005 SENSOR	S101813PG	1944	SENSOR AY- RTD	02/07/2013	5998.02	3032
302037	030		ENGINE INLET TD003 SENSOR	S101813PG	2682	SENSOR AY- RTD	10/23/2016	10218.43	5016
302036	030		WING LEADING EDGE SLAT TR030 SENSOR	S101813PG	2785	SENSOR AY- RTD	01/12/2024	15766	7512
302024	030		AFT OVERWING TR022 SENSOR	S101816PG	5556	SENSOR, RESISTANCE THERMOMETE R	08/24/2022	15016.68	7188

302014	030		OUTBOARD WING LEADING EDGE TR008 SENSOR	S101816PG	5757	SENSOR, RESISTANCE THERMOMETE R	12/01/2019	13556.75	6563
302013	030		OUTBOARD WING LEADING EDGE TL007 SENSOR	S101816PG	5758	SENSOR, RESISTANCE THERMOMETE R	11/23/2019	13551.1	6558
302015	030		MID WING LEADING EDGE TL005 SENSOR	S101816PG	5761	SENSOR, RESISTANCE THERMOMETE R	11/23/2019	13551.1	6558
302016	030		MID WING LEADING EDGE TR006 SENSOR	S101816PG	5775	SENSOR, RESISTANCE THERMOMETE R	11/27/2019	13554.67	6561
302022	030		CENTER OVERWING TR020 SENSOR	S101816PG	5871	SENSOR, RESISTANCE THERMOMETE R	08/24/2022	15016.68	7188
302020	030		FORWARD OVERWING TR018 SENSOR	S101816PG	6012	SENSOR, RESISTANCE THERMOMETE R	08/24/2022	15016.68	7188
302031	030		FORWARD HORIZONTAL STABILIZER TH002 SENSOR	S101816PG	6230	SENSOR, RESISTANCE THERMOMETE R	01/03/2024	15761.08	7510
302019	030		FORWARD OVERWING TL017 SENSOR	S101816PG	NSN	SENSOR, RESISTANCE THERMOMETE R	07/28/2007	0	0
302021	030		CENTER OVERWING TL019 SENSOR	S101816PG	NSN	SENSOR, RESISTANCE THERMOMETE R	07/28/2007	0	0

302023	030		AFT OVERWING TL021 SENSOR	S101816PG	NSN	SENSOR, RESISTANCE THERMOMETE R	07/28/2007	0	0
302025	030		AFT PYLON SENSOR	S101816PG	NSN	SENSOR, RESISTANCE THERMOMETE R	07/28/2007	0	0
302026	030		FORWARD PYLON SENSOR	S101816PG	NSN	SENSOR, RESISTANCE THERMOMETE R	07/28/2007	0	0
302027	030		FORWARD PYLON TT021 SENSOR	S101816PG	NSN	SENSOR, RESISTANCE THERMOMETE R	07/28/2007	0	0
302028	030		AFT PYLON TT020 SENSOR	S101816PG	NSN	SENSOR, RESISTANCE THERMOMETE R	07/28/2007	0	0
302030	030		FORWARD HORIZONTAL STABILIZER TH001 SENSOR	S101816PG	NSN	SENSOR, RESISTANCE THERMOMETE R	07/28/2007	0	0
302032	030		AFT HORIZONTAL STABILIZER TH003 SENSOR	S101816PG	NSN	SENSOR, RESISTANCE THERMOMETE R	07/28/2007	0	0
302033	030		AFT HORIZONTAL STABILIZER TH004 SENSOR	S101816PG	NSN	SENSOR, RESISTANCE THERMOMETE R	07/28/2007	0	0
302018	030		INBOARD WING LEADING EDGE TR004 SENSOR	S101817PG	1152	SENSOR	10/30/2025	15983	7618
302017	030		INBOARD WING LEADING EDGE TL003 SENSOR	S101817PG	899	SENSOR	03/26/2024	15880.27	7568

302012	030		OUTBOARD SLAT TR032 SENSOR	S102642PG	1201	TEMPERATURE SENSOR	12/05/2017	11509.2	5598
302011	030		OUTBOARD SLAT TL031 SENSOR	S102642PG	1613	TEMPERATURE SENSOR	05/14/2021	13810.57	6682
302035	030		WING LEADING EDGE SLAT TL029 SENSOR	S102642PG	429	TEMPERATURE SENSOR	07/28/2007	0	0
313103	031		FDR ACCELEROMETER	3001-01-111	020710603	ACCELEROMETER, TRIAXIAL	07/28/2007	0	0
315005	031	LEFT	LEFT CABIN ALT NC007 MODULE	6718477-11	0170	MODULE	07/28/2007	0	0
315005	031	RIGHT	RIGHT CABIN ALT NC006 MODULE	6718477-11	0183	MODULE	07/28/2007	0	0
313104	031		FDR GRAVITY SWITCH	6895D1-X-5-5	6565	SWITCH	07/28/2007	0	0
314101	031	RIGHT	RIGHT EICAS DATA ACQUISITION UNIT	7013348-943	02035033	COMPUTER, DATA ACQUISITION	04/01/2021	13809.67	6681
314101	031	LEFT	LEFT EICAS DATA ACQUISITION UNIT	7013348-943	02115276	COMPUTER, DATA ACQUISITION	12/30/2025	16151	7704
315001	031	NO. 3	NO. 3 EICAS DISPLAY	7014300-901	0204B310	DISPLAY UNIT, DU-870	10/30/2025	15983	7618
315010	031		EICAS CONTROLLER	7016882-915	05090558	CONTROLLER	02/29/2024	15838.07	7548
316021	031	RIGHT	RIGHT ENGINE VIBRATION MONITOR-	9914582-1	070604	MONITOR	07/28/2007	0	0
316021	031	LEFT	LEFT ENGINE VIBRATION MONITOR-	9914582-1	070605	MONITOR	07/28/2007	0	0
313001	031		FLIGHT HOUR METER	C664503-0104	NSN	METER	07/28/2007	0	0
314301	031		DATA BASE LOADER	G7226-01	903	DATA LOADER	08/12/2022	15002.77	7181
313101	031		FLIGHT DATA RECORDER	NONE INSTALLED	NONE INSTALLED	ANTENNA	07/28/2007	0	0
313002	031		QUICK ACCESS RECORDER (QAR)(STC)	PN	SN-UNKNOWN	UNKNOWN			

323031	032		MAIN GEAR CONTROL	049802-002	0257	HANDLE, LANDING GEAR CONTROL	01/15/2011	3447.95	1779
325012	032		GEAR PRESSURE GAUGE	19940929-1	021750	GAUGE	07/28/2007	0	0
325010	032		POWER STEERING GAUGE	19940929-1	021762	GAUGE	07/28/2007	0	0
325011	032		BRAKE PRESSURE GAUGE	19940929-1	021963	GAUGE	07/28/2007	0	0
324013	032	RIGHT INBOARD	RIGHT INBOARD BRAKE	2-1567-2	1602	BRAKE ASSY	08/23/2021	14059.53	6781
324005	032	LEFT INBOARD	LEFT INBOARD WHEEL	3-1537-2	1388	MAIN WHEEL ASSY, CIT X	02/29/2024	15838.07	7548
324005	032	LEFT OUTBOARD	LEFT OUTBOARD WHEEL	3-1537-2	1855	MAIN WHEEL ASSY, CIT X	08/16/2024	15918.85	7586
324005	032	RIGHT OUTBOARD	RIGHT OUTBOARD WHEEL	3-1537-2	1861	MAIN WHEEL ASSY, CIT X	12/08/2023	15708.98	7487
324005	032	RIGHT INBOARD	RIGHT INBOARD WHEEL	3-1537-2	2073	MAIN WHEEL ASSY, CIT X	05/13/2025	15922.67	7589
324001	032	LEFT	LEFT NOSE WHEEL	3-1538-1	0952	NOSE WHEEL ASSY, CIT X	08/16/2024	15918.85	7586
324001	032	RIGHT	RIGHT NOSE WHEEL	3-1538-1	1752	NOSE WHEEL ASSY, CIT X	08/16/2024	15918.85	7586
323003	032		LANDING GEAR EMERGENCY PNEUMATIC EXTEND BOTTLE	40005338-5	5793	EMER PNEUMATIC EXT BOTTLE- SEE NOTES (BLOW DOWN)	02/29/2024	15838.07	7548
324301	032	AFT	AFT EMERGENCY PNEUMATIC BRAKING BOTTLE	40005355-1	1745	AFT EMER PNEUMATIC BRAKING BOTTLE	02/29/2024	15838.07	7548
326001	032	NOSE GEAR	NOSE GEAR DOWNLOCK SWITCH	6-0275-1	NSN	SWITCH	07/28/2007	0	0

326002	032	LEFT MAIN GEAR	LEFT MAIN GEAR DOWNLOCK SWITCH	6-0275-1	NSN	SWITCH	07/28/2007	0	0
326002	032	RIGHT MAIN GEAR	RIGHT MAIN GEAR DOWNLOCK SWITCH	6-0407-1	NSN	SWITCH	01/25/2017	10506.38	5136
324002	032	LEFT INBOARD	LEFT INBOARD HYDRAULIC FUSE	6376	1130	FUSE	07/28/2007	0	0
324002	032	LEFT OUTBOARD	LEFT OUTBOARD HYDRAULIC FUSE	6376	1142	FUSE	07/28/2007	0	0
324002	032	RIGHT INBOARD	RIGHT INBOARD HYDRAULIC FUSE	6376	1143	FUSE	07/28/2007	0	0
324002	032	RIGHT OUTBOARD	RIGHT OUTBOARD HYDRAULIC FUSE	6376	1145	FUSE	07/28/2007	0	0
325001	032	AFT	AFT AUX POWER VG001 LF VALVE	67020-2	1408	VALVE	07/28/2007	0	0
325001	032		NOSEWHEEL VY009 VALVE	67020-2	1415	VALVE	07/28/2007	0	0
325001	032	FORWARD	FORWARD AUX POWER VG002 RF VALVE	67020-2	1416	VALVE	07/28/2007	0	0
323016	032	RIGHT MAIN GEAR	RIGHT MAIN GEAR UPLOCK ACTUATOR	6727504-10	W305	ACTUATOR	07/28/2007	0	0
323016	032	LEFT MAIN GEAR	LEFT MAIN GEAR UPLOCK ACTUATOR	6727504-9	W620	ACTUATOR	07/28/2007	0	0
323001	032	NOSE GEAR	NOSE GEAR UPLOCK ACTUATOR	6727504-9	W670	ACTUATOR	04/25/2012	5051.92	2568
321005	032	LEFT MAIN GEAR	LEFT MAIN GEAR TRAILING LINK/ AXLE ASSEMBLY	6741013-5	94	AXLE ASSEMBLY	07/28/2007	0	0
321005	032	RIGHT MAIN GEAR	RIGHT MAIN GEAR TRAILING LINK/ AXLE ASSEMBLY	6741013-6	24993100	AXLE ASSEMBLY	07/30/2015	8851.9	4362

321032	032	RIGHT MAIN GEAR	RIGHT MAIN GEAR TRUNNION ATTACH FORWARD PIN	6741015-10	SN-UNKNOWN	PIN	03/24/2016	9571.18	4709
321034	032	RIGHT MAIN GEAR	RIGHT MAIN GEAR TRUNNION ATTACH AFT PIN	6741015-5	SN-UNKNOWN	AFT PIN	03/24/2016	9571.18	4709
321003A	032	RIGHT MAIN GEAR	RIGHT MAIN GEAR TRAILING LINK SPACER	6741016-9	24309544V	SPACER	07/30/2015	8851.9	4362
321003A	032	LEFT MAIN GEAR	LEFT MAIN GEAR TRAILING LINK SPACER	6741016-9	NSN	SPACER	07/28/2007	0	0
321005A	032	RIGHT MAIN GEAR	RIGHT MAIN GEAR LINK/AXLE PIVOT PIN	6741017-6	24911693A	PIVOT PIN	07/30/2015	8851.9	4362
321005A	032	LEFT MAIN GEAR	LEFT MAIN GEAR LINK/AXLE PIVOT PIN	6741017-6	NSN	PIVOT PIN	07/28/2007	0	0
321001	032	LEFT	LEFT MAIN GEAR	6741025-7	1	MAIN GEAR	07/28/2007	0	0
321001	032	RIGHT	RIGHT MAIN GEAR	6741025-8	1	MAIN GEAR	07/28/2007	0	0
321003	032	LEFT MAIN GEAR	LEFT MAIN GEAR TRUNNION ASSEMBLY	6741026-1	84	TRUNNION ASSEMBLY	07/28/2007	0	0
321003	032	RIGHT MAIN GEAR	RIGHT MAIN GEAR TRUNNION ASSEMBLY	6741026-2	76	TRUNNION ASSEMBLY	03/24/2016	9571.18	4709
321009A	032	RIGHT MAIN GEAR	RIGHT MAIN GEAR UPPER BARREL CAP	6741041-7	28483892Z	CAP ASSEMBLY-UPPER BARREL	05/14/2021	13810.57	6682
321015	032	RIGHT MAIN GEAR	RIGHT MAIN GEAR OLEO ASSEMBLY	6741140-14	112	OLEO ASSEMBLY	05/14/2021	13810.57	6682
321015	032	LEFT MAIN GEAR	LEFT MAIN GEAR OLEO ASSEMBLY	6741140-8	BMC206	OLEO ASSEMBLY	05/14/2021	13810.57	6682

321015A	032	RIGHT MAIN GEAR	RIGHT MAIN GEAR OLEO ASSEMBLY RETAINER NUT	6741143-1	N/A	RETAINER	05/14/2021	13810.57	6682
321014	032	NOSE LANDING GEAR	NOSE LANDING GEAR TRUNNION	6742020-5	227	TRUNNION	07/28/2007	0	0
322001	032	NOSE	NOSE (INCLUDING TRUNNION, UPPER AND LOWER BARREL ASSEMBLIES, FITTINGS AND ATTACHING HARDWARE) LANDING GEAR	6742160-7	45	NOSE LANDING GEAR	07/28/2007	0	0
321012	032	NOSE LANDING GEAR	NOSE LANDING GEAR UPPER BARREL	6742180-1	4	UPPER BARREL	07/28/2007	0	0
325002	032		POWER STEERING UNIT	71487-9	0366	POWER STEERING UNIT	08/05/2023	15444.03	7374
324026	032		BRAKE METERING VALVE	71504-3 - 9914468-3	0171	VALVE	03/05/2011	3596.02	1854
323015	032	NOSE GEAR	NOSE GEAR SHUTTLE VALVE	98120	3860	VALVE	07/28/2007	0	0
323013	032	LEFT MAIN GEAR	LEFT MAIN GEAR SHUTTLE VALVE	98120	3913	VALVE	07/28/2007	0	0
323013	032	RIGHT MAIN GEAR	RIGHT MAIN GEAR SHUTTLE VALVE	98120	3926	VALVE	07/28/2007	0	0
324029	032		PARKING BRAKE VALVE	9912388-6	290	VALVE PARK BRAKE	07/28/2007	0	0
325004	032	NOSE GEAR	NOSE GEAR STEERING GEARBOX	9914258-9	263	GEARBOX	07/28/2007	0	0
324025	032		ANTISKID CONTROL BOX	9914450-4	105	CONTROL BOX	04/01/2021	13809.67	6681
324021	032	RIGHT	RIGHT ANTISKID CONTROL VALVE	9914450-5	574	VALVE	07/28/2007	0	0

324021	032	LEFT	LEFT ANTISKID CONTROL VALVE	9914450-5	576	VALVE	07/28/2007	0	0
323009	032	LEFT MAIN GEAR	LEFT MAIN GEAR SIDE BRACE ACTUATOR	9914451-3	0541	SIDE BRACE ACTUATOR	07/28/2007	0	0
323009	032	RIGHT MAIN GEAR	RIGHT MAIN GEAR SIDE BRACE ACTUATOR	9914451-3	0567	SIDE BRACE ACTUATOR	07/28/2007	0	0
323002	032	NOSE LANDING GEAR	NOSE LANDING GEAR ACTUATOR	9914452-3	0332	ACTUATOR	07/28/2007	0	0
324013	032	LEFT OUTBOARD	LEFT OUTBOARD BRAKE	9914463-9	1019	BRAKE	05/29/2012	5179.42	2614
324013	032	LEFT INBOARD	LEFT INBOARD BRAKE	9914463-9	1301	BRAKE	04/22/2012	5042.12	2560
324013	032	RIGHT OUTBOARD	RIGHT OUTBOARD BRAKE	9914463-9	1333P	BRAKE	07/01/2019	13167.7	6364
325003	032		NOSE WHEEL STEERING ACCUMULATOR	9914467-2	0059T	ACCUMULATOR	08/13/2009	2002.3	1061
324028	032		EMERGENCY BRAKE VALVE	9914478-2	0289	VALVE	07/28/2007	0	0
324207	032		PARKING BRAKE SWITCH	9914485-4	0648323	SWITCH	07/28/2007	0	0
323050	032		LANDING GEAR CONTROL MANIFOLD	9914637-1	255	MANIFOLD	07/28/2007	0	0
323100	032		LANDING GEAR NC002 MODULE	9914728-2	412	MODULE LANDING GEAR LOGIC	07/28/2007	0	0
321013	032	NOSE LANDING GEAR	NOSE LANDING GEAR LOWER BARREL	DDA03537-1	177	BARREL	07/28/2007	0	0
324009	032	LEFT OUTBOARD	LEFT OUTBOARD TIRE	M08401	3182T146	TIRE, MAIN	08/16/2024	15918.85	7586

324009	032	RIGHT OUTBOARD	RIGHT OUTBOARD TIRE	M14401	3284K115	MAIN TIRE (MICHELIN)	12/08/2023	15708.98	7487
324009	032	LEFT INBOARD	LEFT INBOARD TIRE	M14401	3298K127	MAIN TIRE (MICHELIN)	02/29/2024	15838.07	7548
324009	032	RIGHT INBOARD	RIGHT INBOARD TIRE	M14401	3309K106	MAIN TIRE (MICHELIN)	05/13/2025	15922.67	7589
324003	032	RIGHT	RIGHT NOSE GEAR TIRE	M15601	3188T189	NOSE TIRE	08/16/2024	15918.85	7586
324003	032	LEFT	LEFT NOSE GEAR TIRE	M15601	3189T171	NOSE TIRE	08/16/2024	15918.85	7586
321009A	032	LEFT MAIN GEAR	LEFT MAIN GEAR UPPER BARREL CAP	PN- UNKNOWN	SN- UNKNOWN	-	04/01/2021	13809.67	6681
321015A	032	LEFT MAIN GEAR	LEFT MAIN GEAR OLEO ASSEMBLY RETAINER NUT	PN- UNKNOWN	SN- UNKNOWN	-	04/01/2021	13809.67	6681
334005	033		TAIL LIGHT ASSEMBLY	01-0770966-00	420182	TAIL LIGHT ASSEMBLY	01/21/2024	15768.4	7513
334001	033		UPPER STROBE LIGHT	01-0790088-03	18343780001	GROUND RECOGNITION LIGHT	08/16/2024	15918.85	7586
334002	033		BELLY STROBE LIGHT	01-0790724-03	18343780002	GROUND RECOG LIGHT	08/16/2024	15918.85	7586
333001	033	FORWAR D	FORWARD ENTRY CONTROLLER	104001-1	340504	CONTROLLER	10/06/2007	256.6	135
331001	033	LEFT	LEFT LIGHT DIMMER	1821-1	1306	DIMMER ASSEMBLY	03/25/2019	12868.77	6230
332030	033		PULSE LT CONTROLLER	2400-25-4-4-	TR01097	CONTROLLER	07/28/2007	0	0
331001	033	RIGHT	RIGHT LIGHT DIMMER	273-1	206460217	DIMMER	07/28/2007	0	0
331001	033	CENTER	CENTER LIGHT DIMMER	273-1	206510052	DIMMER	07/28/2007	0	0
334009	033	LEFT AFT	LEFT AFT LED WING NAV LIGHT ASSY	30-2900-3	11731	LH NAV LIGHT ASSY	04/20/2022	14730.45	7061
334009	033	LEFT FORWAR D	LEFT FORWARD LED WING NAV LIGHT ASSY	30-2900-3	11749	LH NAV LIGHT ASSY	04/20/2022	14730.45	7061

334010	033	RIGHT AFT	RIGHT AFT LED WING NAV LIGHT ASSY	30-2900-4	11700	LIGHT, GREEN - WING POSITION	04/20/2022	14730.45	7061
334010	033	RIGHT FORWARD	RIGHT FORWARD LED WING NAV LIGHT ASSY	30-2900-4	11721	LIGHT, GREEN - WING POSITION	04/20/2022	14730.45	7061
333010	033		EICAS LOGIC NK101 MODULE	6718474-1	0496	MODULE	08/21/2016	9987.9	4901
334003	033	MID	MID AFT ENTRY STEP LIGHT ASSEMBLY	6900163-001	04618	LIGHT ASSEMBLY	04/20/2022	14730.45	7061
331004	033		CB PANEL INVERTER	6900173-000	SN-UNKNOWN	INVERTER	07/28/2007	0	0
335001	033	NO. 1	NO. 1 FORWARD EMERGENCY BATTERY PACK	9913-1	1138	BATTERY PACK, CABIN EMERGENCY LIGHTING	01/04/2026	16156.7	7707
335001	033	NO. 2	NO. 2 AFT EMERGENCY BATTERY PACK	9913-1	2522	BATTERY PACK, CABIN EMERGENCY LIGHTING	01/04/2026	16156.7	7707
332001	033	CENTER	CENTER LIGHT POWER SUPPLY	CLC500-01	500001777	POWER SUPPLY	07/28/2007	0	0
332001	033	AFT	AFT LIGHT POWER SUPPLY	CLC500-01	500001779	POWER SUPPLY	07/28/2007	0	0
332001	033	FORWARD	FORWARD LIGHT POWER SUPPLY	CLC500-01	500001786	POWER SUPPLY	07/28/2007	0	0
331000	033		EL PANEL INVERTER	EM2044-1	6380A	INVERTER	01/29/2018	11696.2	5674
334011	033	LEFT	LEFT ANTI-COLLISION LIGHT	GE16846-1	1322086	STROBE LIGHT ASSY	08/03/2018	12205.13	5903
334011	033	RIGHT	RIGHT ANTI-COLLISION LIGHT	GE16846-1	AF0745	STROBE LIGHT ASSY	12/15/2013	7044.33	3525
341301	034	LEFT	LEFT RAT PROBE	102LC1AF	A69139	TEMP PROBE	07/28/2007	0	0
341301	034	RIGHT	RIGHT RAT PROBE	102LC1AF	A69140	TEMP PROBE	07/28/2007	0	0
341001	034	RIGHT	RIGHT PITOT TUBE	2800-493	AS06250845	PITOT TUBE	08/19/2025	15922.67	7589

340132	034		AFIS DATA MANAGEMENT UNIT	400-045500-0003	4195	DATA MANAGEMENT UNIT	07/28/2007	0	0
340113	034	LEFT	LEFT ASCB DATA COUPLER	5008500-002	14319	COUPLER	07/28/2007	0	0
340113	034	RIGHT	RIGHT ASCB DATA COUPLER	5008500-002	14321	COUPLER	07/28/2007	0	0
342204	034	NO. 1	NO. 1 JET GYRO EMERGENCY POWER SUPPLY	501-1228-03	10262	PS835C AIRCRAFT BATTERY	08/16/2024	15918.85	7586
342202	034		STANDBY GYRO CONVERTER	501-1318-01	4683	STATIC CONVERTER	06/07/2023	15414.62	7359
342201	034		STANDBY GYRO	501-1568-28	2516	STANDBY GYRO	08/07/2012	5414.15	2729
342301	034		STANDBY HSI INDICATOR	520-3151-003	24796	INDICATOR	07/28/2007	0	0
341001	034	LEFT	LEFT PITOT TUBE	6708303-9	AS05250221	PITOT TUBE	08/19/2025	15922.67	7589
341500	034		RADIO ALT	7001840-936	070D500	ALTIMETER	07/28/2007	0	0
344100	034		WEATHER RADAR CONTROL	7008471-417	129379 MOD0	CONTROLLER	07/28/2007	0	0
342512	034	5	5 PRIMARY FLIGHT DISPLAY	7014300-901	01038800	DISPLAY UNIT, DU-870	10/26/2025	15975.4	7613
342514	034	NO. 2	NO. 2 MULTIFUNCTION DISPLAY	7014300-901	0701G047	DISPLAY UNIT, DU-870	07/28/2007	0	0
342514	034	NO. 4	NO. 4 MULTIFUNCTION DISPLAY	7014300-901	0701G051	DISPLAY UNIT, DU-870	08/20/2018	12270.23	5931
342512	034	1	1 PRIMARY FLIGHT DISPLAY	7014300-901	0803H080	DISPLAY UNIT, DU-870	08/21/2016	9987.9	4901
346001	034	NO. 1	NO. 1 LEFT DISPLAY BEZEL	7014331-915	07015462	BEZEL, CONTROLLER BL871	07/28/2007	0	0
346001	034	NO. 5	NO. 5 RIGHT DISPLAY BEZEL	7014331-915	07015464	BEZEL, CONTROLLER BL871	07/28/2007	0	0
346001	034	NO. 2	NO. 2 LEFT DISPLAY BEZEL	7014332-811	07018174	BEZEL CONTROLLER	07/28/2007	0	0
346001	034	NO. 4	NO. 4 RIGHT DISPLAY BEZEL	7014332-811	07018191	BEZEL CONTROLLER	07/28/2007	0	0

346001	034	NO. 3	NO. 3 CENTER DISPLAY BEZEL	7014332-811	96080999	BEZEL CONTROLLER	04/01/2021	13809.67	6681
342509	034	LEFT	LEFT REMOTE INST CONTROLLER	7016609-905	120723 MODA	CONTROLLER	07/28/2007	0	0
342509	034	RIGHT	RIGHT REMOTE INST CONTROLLER	7016609-915	97100254	CONTROLLER	12/22/2018	12587.37	6083
342503	034	LEFT	LEFT DISPLAY CONTROLLER	7016683-911	07012368	CONTROLLER	07/28/2007	0	0
342503	034	RIGHT	RIGHT DISPLAY CONTROLLER	7016683-911	95070135	CONTROLLER	04/01/2021	13809.67	6681
342505	034	LEFT	LEFT SOURCE CONTROLLER	7016709-905	07010719	CONTROLLER	07/28/2007	0	0
342505	034	RIGHT	RIGHT SOURCE CONTROLLER	7016709-905	07010720	CONTROLLER	07/28/2007	0	0
342507	034	LEFT	LEFT REVERSIONARY CONTROLLER	7016880-917	07010730	CONTROLLER	07/28/2007	0	0
342507	034	RIGHT	RIGHT REVERSIONARY CONTROLLER	7016880-917	07010733	CONTROLLER	07/28/2007	0	0
346015	034	NO. 1	NO. 1 AVIONICS COMPUTER	7017300-31494	06033431	IAC COMPUTER	11/19/2025	16060.6	7653
346015	034	NO. 2	NO. 2 AVIONICS COMPUTER	7017300-31494	98071198	IAC COMPUTER	11/19/2025	16060.6	7653
344101	034		RADAR TRANSCEIVER	7021450-801	01043047	RADAR TRANSMITTER RECEIVER	02/13/2023	15307.27	7312
345307	034		ARRAY ANTENNA	7021479-2	NSN	ANTENNA	07/28/2007	0	0
341101	034	LEFT	LEFT AIR DATA COMPUTER	7030700-70706	06091143	AIR DATA COMPUTER	06/07/2023	15414.62	7359
341101	034	RIGHT	RIGHT AIR DATA COMPUTER	7030700-70706	97101456	AIR DATA COMPUTER	06/07/2023	15414.62	7359
345101	034	NO. 2	NO. 2 ADF ANTENNA	7510300-901	09A873 MODE	ADF ANTENNA	07/28/2007	0	0
344401	034	BOTTOM	BOTTOM TCAS ANTENNA	7514081-902	ANE60927	ANTENNA	06/07/2023	15414.62	7359
344401	034	TOP	TOP TCAS ANTENNA	7514081-910	ANE24501	ANTENNA, TCAS DIRECTIONAL	07/28/2007	0	0
344402	034		TCAS PROCESSOR	7517900-	02076027	PROCESSOR	04/01/2021	13809.67	6681

346020	034	L/H	L/H AVIONICS JUNCTION BOX	9555037-1	82117	JUNCTION BOX	11/16/2017	11437.33	5562
340130	034		EGPWS COMPUTER	965-0976-040-219-219	2411	EGPWS COMPUTER	06/13/2015	8797.55	4336
340119	034	RIGHT	RIGHT IRS MODE SELECT UNIT	CG1042AB03	731309 MOD4	SELECTOR MODE SELECT UNIT	01/07/2018	11612.68	5641
340119	034	LEFT	LEFT IRS MODE SELECT UNIT	CG1042AB03	731556 MOD4	SELECTOR MODE SELECT UNIT	01/07/2018	11612.68	5641
340109	034	LEFT	LEFT NAV ANTENNA	CI120-1-L	658193	ANTENNA	05/14/2021	13810.57	6682
340109	034	RIGHT	RIGHT NAV ANTENNA	CI120-1-L	658194	ANTENNA	05/14/2021	13810.57	6682
340110	034		NAV COUPLER	CI120-5	162351	COUPLER	07/28/2007	0	0
343000	034		MARKER BEACON ANTENNA	CI165	169606	ANTENNA	07/28/2007	0	0
340111	034		GLIDESLOPE COUPLER	CI503	150273	COUPLER	07/28/2007	0	0
340107	034	NO. 1	NO. 1 FORWARD BOTTOM TRANSPONDER ANTENNA	DMNI50-2-2	113020	ANTENNA	07/28/2007	0	0
345303	034	NO. 1	NO. 1 FORWARD DME ANTENNA	DMNI50-2-2	113123	ANTENNA	07/28/2007	0	0
340107	034	NO. 2	NO. 2 AFT BOTTOM TRANSPONDER ANTENNA	DMNI50-2-2	113126	ANTENNA	07/28/2007	0	0
345303	034	NO. 2	NO. 2 AFT DME ANTENNA	DMNI50-2-2	113131	ANTENNA	07/28/2007	0	0
345301	034	AFT	AFT TOP TRANSPONDER ANTENNA	DMNI50-2-2	11838	ANTENNA	07/28/2007	0	0
345301	034	FORWARD	FORWARD TOP TRANSPONDER ANTENNA	DMNI50-2-2	11843	ANTENNA	07/28/2007	0	0
346017	034	RIGHT	RIGHT FMS CONTROL UNIT	G7830-03	74141	CDU, CD-830	11/19/2025	16060.6	7653
346017	034	LEFT	LEFT FMS CONTROL UNIT	G7830-03	74142	CDU, CD-830	10/21/2022	15128.62	7238
344301	034	RIGHT	RIGHT INERTIAL REFERENCE SYSTEM	HG2001GD03	56002661	IRU	01/11/2019	12642.57	6110
344301	034	LEFT	LEFT INERTIAL REFERENCE SYSTEM	HG2001GD03	56011332	IRU	11/10/2017	11421.98	5554
345507	034	NO. 1	NO. 1 GPS SENSOR	HG2021GD06	0255	SENSOR, GPS	07/01/2019	13167.7	6364
345507	034	NO. 2	NO. 2 GPS SENSOR	HG2021GD06	0256	SENSOR, GPS	07/01/2019	13167.7	6364

341003	034	STANDBY	STANDBY PITOT TUBE	PH1100-1-RCJW	AS09212511	PITOT TUBE	09/27/2023	15519.58	7406
3401XJ	034		EGPWS TERRAIN DATABASE UPDATE	PN-UNKNOWN	632	ACTUATOR	03/27/2023	15352.7	7331
343002	034		GLIDESLOPE ANTENNA	RGS10-48	12016	ANTENNA	07/28/2007	0	0
345101	034	NO. 1	NO. 1 ADF ANTENNA	S3100-17	1709Q268	ADF ANTENNA	03/02/2018	11746.32	5700
345501	034	NO. 1	NO. 1 GPS ANTENNA	S67-1575-137	773-6387	GPS ANTENNA	07/01/2019	13167.7	6364
345501	034	NO. 2	NO. 2 GPS ANTENNA	S67-1575-137	773-6388	GPS ANTENNA	07/01/2019	13167.7	6364
341207	034	RIGHT	RIGHT RADIO ALTIMETER ANTENNA	S67-2002-4	55214260	ANTENNA	07/28/2007	0	0
341207	034	LEFT	LEFT RADIO ALTIMETER ANTENNA	S67-2002-4	55214261	ANTENNA	07/28/2007	0	0
341201	034	RIGHT	RIGHT AOA TRANSMITTER	SLZ7903	EN0423	AOA TRANSMITTER	08/30/2017	11140.72	5422
341201	034	LEFT	LEFT AOA TRANSMITTER	SLZ7903	EN0601	AOA TRANSMITTER	03/02/2018	11746.32	5700
341205	034		AOA INDICATOR	SLZ8052	EU0183	AOA INDICATOR	06/06/2019	13160.15	6357
341203	034	RIGHT	RIGHT AOA STALL COMPUTER	SLZ8071-2	MX0138	COMPUTER	09/29/2015	9026.8	4454
341203	034	LEFT	LEFT AOA STALL COMPUTER	SLZ8071-3	AU0048B	COMPUTER	09/29/2015	9026.8	4454
341204	034		AOA INDEXER	SLZ9374N	707	INDEXER	07/28/2007	0	0
341103	034	STANDBY	STANDBY ALTIMETER/ AIRSPEED	WL102AMS6	AP809	INDICATOR, ALT AIRSPEED STDBY	05/13/2025	15922.67	7589
353001	035		PORTABLE OXYGEN BOTTLE	5500M6W-FF23AN	P06091815	BOTTLE	02/10/2022	14562.85	6990

351001	035	76 CU FT	76 CU FT OXYGEN CYLINDER	804882-14	C14110596	BOTTLE, OXYGEN & REGULATOR ASSY	04/01/2021	13809.67	6681
351001	035	49 CU FT	49 CU FT OXYGEN CYLINDER	804882-23	C07050752	OXY BOTTLE & REG ASSY	12/21/2022	15230.07	7279
351003	035		OXYGEN PRESSURE VALVE	9914067-19	2621	VALVE	07/28/2007	0	0
350102	035		OXYGEN PRESSURE GAUGE	C668512-0101	B0710261	GAGE	07/28/2007	0	0
350102	035	NO. 3	NO. 3 OXYGEN PRESSURE GAUGE	C668512-0101	B0710270	GAGE	07/28/2007	0	0
350102	035	NO. 2	NO. 2 OXYGEN PRESSURE GAUGE	C668512-0201	B0610116	GAUGE	07/28/2007	0	0
351005	035	PILOT	PILOT CREW OXYGEN MASK	MC10-16-100	115359	CREW O2 MASK	02/29/2024	15838.07	7548
351005	035	COPILOT	COPILOT CREW OXYGEN MASK	MC10-16-100	B187293	CREW O2 MASK	12/18/2022	15224.67	7277
351008	035		PROTECTIVE BREATHING EQUIPMENT	MR-10035N	E1609874	SMOKE HOOD PBE W/POUCH	03/15/2017	10646.87	5202
351010	035	PILOT	PILOT OXYGEN MASK STOWAGE BOX ASSEMBLY	MXP326-1	40085	STOWAGE BOX, MASK, OXYGEN	06/07/2023	15414.62	7359
351010	035	COPILOT	COPILOT OXYGEN MASK STOWAGE BOX ASSEMBLY	MXP326-1	SE01538	STOWAGE BOX, MASK, OXYGEN	12/18/2022	15224.67	7277
351007	035		OXYGEN SEQUENCE REGULATOR	P21087-1	NSN	REGULATOR	07/28/2007	0	0
361021	036		ENGINE SOLENOID VALVE	5035-00-1	3589	VALVE	03/19/2024	15872.32	7565
361505	036		VACUUM EJECTOR PARTICULATE TRAP	6614051-29	SN- UNKNOWN	TRAP	07/26/2022	14957.45	7165
361003	036	LEFT	LEFT PRESSURE REGULATOR VALVE	9914133-2	N064882	VALVE	05/13/2022	14780.3	7087
361005	036		PRESSURE REGULATOR VALVE	9914133-2	N064885	VALVE	07/09/2021	13912.52	6727
361004	036	RIGHT	RIGHT PRESSURE REGULATOR VALVE	9914133-2	N070114	VALVE	05/13/2022	14780.3	7087

361001	036	RIGHT	RIGHT HIGH PRESSURE SENSOR	9914149-2	5084	SWITCH SENSOR	07/28/2007	0	0
361001	036	LEFT	LEFT HIGH PRESSURE SENSOR	9914149-2	5192	SWITCH SENSOR	07/28/2007	0	0
361500	036	RIGHT	RIGHT ENGINE SERVICE AIR CHECK VALVE	9914171-1	6643	CHECK VALVE	08/15/2010	2947.05	1539
361014	036		LOW PRESSURE B/A VALVE	9914518-1	0283	VALVE	06/04/2021	13846.9	6700
361101	036	LEFT	LEFT HIGH PRESSURE SENSOR	9914519-2	9BB499	SENSOR	07/28/2007	0	0
361101	036	RIGHT	RIGHT HIGH PRESSURE SENSOR	9914519-2	9BB506	SENSOR	07/28/2007	0	0
361103	036	RIGHT	RIGHT INLET DOOR ACTUATOR	9914519-4	11BB213	ACTUATOR	07/28/2007	0	0
361103	036	LEFT	LEFT INLET DOOR ACTUATOR	9914519-4	12BB239	ACTUATOR	07/28/2007	0	0
361019	036	RIGHT	RIGHT LOW PRESSURE VALVE	9914520-1	1569	VALVE	06/04/2021	13846.9	6700
361019	036	LEFT	LEFT LOW PRESSURE VALVE	9914520-1	1570	VALVE	06/04/2021	13846.9	6700
361015	036	RIGHT	RIGHT HIGH PRESSURE VALVE	9914520-2	1967	VALVE	11/17/2018	12455.45	6021
361015	036	LEFT	LEFT HIGH PRESSURE VALVE	9914520-2	2066	VALVE	11/17/2018	12455.45	6021
361013	036	RIGHT	RIGHT PRESS HEAT EXCHANGER	9914522-1	54883T0565	HEAT EXCHANGER	07/28/2007	0	0
361013	036	LEFT	LEFT PRESS HEAT EXCHANGER	9914522-1	54883T0566	HEAT EXCHANGER	07/28/2007	0	0
361100	036	RIGHT	RIGHT HIGH PRESSURE VALVE	9914536-3	1569	VALVE, SHUTOFF ENGINE BLEED	06/04/2021	13846.9	6700
361100	036	LEFT	LEFT HIGH PRESSURE VALVE	9914536-3	2022	VALVE, SHUTOFF ENGINE BLEED	07/28/2007	0	0

361017	036	RIGHT	RIGHT HIGH/LOW VT028 VALVE	9914536-5	0177	VALVE	10/09/2009	2120.1	1129
361017	036	LEFT	LEFT HIGH/LOW VT029 VALVE	9914536-5	1923	VALVE	10/12/2010	3085.92	1610
361011	036	LEFT	LEFT ENGINE BLEED VALVE	9914552-1	1810	VALVE	07/28/2007	0	0
361011	036	RIGHT	RIGHT ENGINE BLEED VALVE	9914552-1	1812	VALVE	07/28/2007	0	0
371001	037		VACUUM CHECK VALVE	9914487-2	1164394	VALVE	07/28/2007	0	0
382005	038		LAV SINK WATER PUMP ASSEMBLY	0813	0413	PUMP ASSEMBLY	02/10/2022	14562.85	6990
382010	038	FORWARD	FORWARD DRAIN HEATER	105881	NSN	DRAIN HEATER	05/22/2013	6346	3221
382012	038	LAVATORY	LAVATORY DRAIN HEATER	105881	SN-UNKNOWN	HEATER	12/03/2012	5844.23	2945
382001	038		LAVATORY WATER TANK	12614-1	SN-UNKNOWN	LAV SINK POTABLE WATER TANK	07/28/2007	0	0
382008	038		LAV TRANSMITTER LIQUID LEVEL	13503-110	141	TRANSMITTER	03/04/2017	10615.38	5166
383109	038		TOILET ASSEMBLY	15900-020	204	TOILET ASSEMBLY			
381001	038		TOILET PUMP MOTOR	3511-007	NSN	TOILET PUMP MOTOR	07/28/2007	0	0
382014	038	LAVATORY	LAVATORY HEATED DRAIN LINE	4699019-1	506	HEATED DRAIN HOSE VANITY	06/05/2018	12094.13	5855
493003	043		APU - BEARING RLR	3842004-1	20-162370-00693	BEARING	01/29/2021	8365	
460001	046	#1	#1 ELECTRONIC FLIGHT BAG (EFB) MAINTENANCE INTERVAL FOR IT DEPARTMENT	EFB	00279751-LE1700	ELECTRONIC FLIGHT BAG	05/07/2009		
460002	046	#2	#2 ELECTRONIC FLIGHT BAG (EFB) MAINTENANCE INTERVAL FOR IT DEPARTMENT	EFB	00298718-LE1700	ELECTRONIC FLIGHT BAG	05/07/2009		

490010	049		APU - APU OIL TEMPERATURE SENSOR	102-00002	SN-UNKNOWN	SENSOR	03/31/2004	0	
490003	049		APU - SHUTOFF VALVE	109812-12	3609	SHUTOFF VALVE	06/04/2021		
494006	049		APU CONTROL BOX	2118864-2	17-C0005	CONTROL UNIT	05/14/2021	13810.57	6682
499001	049		APU - OIL TEMPERATURE SWITCH	361157-1	SN-UNKNOWN	SWITCH	03/31/2004	0	
49-10-00-9600	049		APU - AUXILIARY POWER UNIT TURBINE ROTOR DISCARD	3615880-4	030134500701	-	10/14/2020	8312	
49APU1	049		APU	3800576-1	P-349	APU	03/25/2021	13809.67	6681
492002	049		APU - AUXILIARY POWER UNIT COMPRESSOR ROTOR DISCARD	3822101-1	031365100177	COMPRESSOR	10/14/2020	8312	
497002	049		APU - LOW OIL SWITCH	3876001-8	SN-UNKNOWN	TRANSDUCER	03/31/2004	0	
497003	049		APU - APU EGT THERMOCOUPLE	3876003-3	2115027700219	THERMOCOUPLE	11/22/2021	8665	
497004	049		APU - OIL PRESSURE REGULATOR	3880021-17	SN-UNKNOWN	REGULATOR	03/31/2004	0	
499002	049		APU - OIL ROTARY PUMP ASSEMBLY	3880225-2	SN-UNKNOWN	PUMP ASSEMBLY	03/31/2004	0	
493002	049		APU - FUEL CONTROL	3882730-8	27119	FUEL CONTROL	03/31/2004	0	
490006	049		APU - SURGE SHUTOFF VALVE	3884538-3	SN-UNKNOWN	SHUTOFF VALVE	03/31/2004	0	
494003	049		APU - IGNITION EXCITER	3888000-2	080218085206	IGNITION UNIT, APU	06/28/2013	4000	
494005	049		APU - APU IGNITOR PLUG	3888002-2	N/A	IGNITOR APU PLUG	02/10/2025	9884	
490002	049		APU - HOURMETER	3888126-1	SN-UNKNOWN	HOURMETER	03/31/2004	0	
493001	049		APU - APU FUEL SHUT-OFF SOLENOID VALVE	3888134-5	SN-UNKNOWN	FUEL SHUT-OFF VALVE	03/31/2004	0	
494004	049		APU - IGNITION LEAD	3888302-6	SN-UNKNOWN	LEAD, IGNITOR APU	03/31/2004	0	

494008	049		APU - APU STARTER MOTOR	519892-6-3	6416	STARTER, APU, ELECTRIC	10/20/2023	9612	
491001	049		APU - APU (NK102) CONTROL MODULE	6718463-6	0552	LOGIC MODULE	12/08/2022		
497006	049		APU - MAX RPM INDICATOR	M453	23634	INDICATOR	03/31/2004	0	
490005	049		APU - AUXILIARY POWER DC AMMETER	MD139-11	D23237	AMMETER	09/18/2007	1524	
497001	049		APU - MONOPOLE SPEED SENSOR	PN- UNKNOWN	SN- UNKNOWN	-	01/29/2021	8365	
527001	052		CABIN DOOR NC003 MODULE	6718151-11	0398	MODULE	07/28/2007	0	0
527015	052		TAILCONE BAGGAGE DOOR (SK011) PROXIMITY SWITCH	8-405-02	A80602	PROXIMITY SWITCH	07/10/2018	12141.27	5879
527010	052		MAIN CABIN DOOR (SC024) PROXIMITY SWITCH	8-405-04	B83338	PROXIMITY SWITCH	09/15/2019	13385.62	6474
521005	052		ACOUSTIC UPPER SEAL	9522-11	1512	DOOR SEAL	06/07/2023	15414.62	7359
521007	052		ACOUSTIC AFT LOWER SEAL	9522-13	1090	ACOUSTIC DOOR SEAL, AFT	06/07/2023	15414.62	7359
521006	052		ACOUSTIC FORWARD LOWER SEAL	9522-17	0159	ACOUSTIC SEAL, FORWARD	06/07/2023	15414.62	7359
521002	052		DOOR SECONDARY SEAL	9914294-2	NSN	SEAL	07/28/2007	0	0
521003	052		TAILCONE DOOR SEAL	9914553-1	NSN	BAGGAGE DOOR SEAL	07/10/2018	12141.27	5879
521001	052		DOOR INFLATABLE SEAL	9914602-1	0190	SEAL, MAIN DOOR	07/01/2019	13167.7	6364
532001	053		ACTUATOR ATTACH FITTING ASSEMBLY	6711060-38	NSN	ATTACH FITTING	07/28/2007	0	0
531001	053	LEFT	LEFT TRUNNION ATTACH SUPPORT ASSEMBLY	6713052-13	NSN	SUPPORT ASSEMBLY	08/05/2023	15444.03	7374
531001	053	RIGHT	RIGHT TRUNNION ATTACH SUPPORT ASSEMBLY	6713052-13	NSN	SUPPORT ASSEMBLY	07/28/2007	0	0
530045	053		RADOME	6713101-809	353	RADOME	03/05/2010	2528.4	1338
552001	055	RIGHT	RIGHT ELEVATOR ASSEMBLY	6734000-18	097	ELEVATOR ASSEMBLY	11/03/2013	6889.4	3456

552000	055	RIGHT	RIGHT HINGE EHS BRACKET ASSY	6734021-12	NSN	BRACKET ASSY	07/28/2007	0	0
552000	055	LEFT	LEFT HINGE EHS BRACKET ASSY	6734021-13	NSN	BRACKET ASSY	07/28/2007	0	0
561301	056	LEFT	LEFT AFT SIDE WINDOW	9914116-33	03110906	WINDOW	07/28/2007	0	0
561301	056	RIGHT	RIGHT AFT SIDE WINDOW	9914116-34	02860606	WINDOW	07/28/2007	0	0
562001	056	LEFT NO. 4	LEFT NO. 4 CABIN WINDOW	9914159-12	NSN	WINDOW	07/28/2007	0	0
562001	056	LEFT NO. 1	LEFT NO. 1 CABIN WINDOW	9914159-12	NSN	WINDOW	07/28/2007	0	0
562001	056	LEFT NO. 2	LEFT NO. 2 CABIN WINDOW	9914159-12	NSN	WINDOW	07/28/2007	0	0
562001	056	LEFT NO. 6	LEFT NO. 6 CABIN WINDOW	9914159-12	NSN	WINDOW	07/28/2007	0	0
562001	056	LEFT NO. 3	LEFT NO. 3 CABIN WINDOW	9914159-12	NSN	WINDOW	07/28/2007	0	0
562001	056	LEFT NO. 5	LEFT NO. 5 CABIN WINDOW	9914159-12	NSN	WINDOW	07/28/2007	0	0
562011	056	RIGHT NO. 2	RIGHT NO. 2 CABIN WINDOW	9914159-12	NSN	WINDOW	07/28/2007	0	0
562011	056	RIGHT NO. 7	RIGHT NO. 7 CABIN WINDOW	9914159-12	NSN	WINDOW	07/28/2007	0	0
562011	056	RIGHT NO. 6	RIGHT NO. 6 CABIN WINDOW	9914159-12	NSN	WINDOW	07/28/2007	0	0
562011	056	RIGHT NO. 5	RIGHT NO. 5 CABIN WINDOW	9914159-12	NSN	WINDOW	07/28/2007	0	0
562011	056	RIGHT NO. 4	RIGHT NO. 4 CABIN WINDOW	9914159-12	NSN	WINDOW	07/28/2007	0	0
562011	056	RIGHT NO. 3	RIGHT NO. 3 CABIN WINDOW	9914159-12	NSN	WINDOW	07/28/2007	0	0
562011	056	RIGHT NO. 1	RIGHT NO. 1 CABIN WINDOW	9914159-12	NSN	WINDOW	07/28/2007	0	0
561201	056	LEFT	LEFT FORWARD SIDE WINDOW	9914379-7	06346H9646	WINDOW	07/28/2007	0	0
561201	056	RIGHT	RIGHT FORWARD SIDE WINDOW	9914379-8	06347H9712	WINDOW, RIGHT HAND HEATED SIDE	07/28/2007	0	0

561001	056	LEFT	LEFT WINDSHIELD ASSY, (LH)	9914380-13	18169H0333	WINDSHIELD	10/20/2018	12407.13	5994
561001	056	RIGHT	RIGHT WINSHIELD ASSY, (RH)	9914380-14	15007H9743	WINDSHIELD	10/02/2015	9027.95	4456
572003	057	LEFT	LEFT SIDE BRACE ACTUATOR FITTING ASSEMBLY	6721323-5	NSN	FITTING ASSEMBLY	07/28/2007	0	0
572003	057	RIGHT	RIGHT SIDE BRACE ACTUATOR FITTING ASSEMBLY	6721323-6	NSN	FITTING ASSEMBLY	07/28/2007	0	0
572001	057	LEFT FORWARD	LEFT FORWARD TRUNNION ATTACH FITTING ASSEMBLY	6722324-5	NSN	FITTING ASSEMBLY	07/28/2007	0	0
572001	057	RIGHT FORWARD	RIGHT FORWARD TRUNNION ATTACH FITTING ASSEMBLY	6722324-6	NSN	FITTING ASSEMBLY	07/28/2007	0	0
573001	057	RIGHT HAND	RIGHT HAND AILERON ASSEMBLY	6724051-4	048	AILERON ASSEMBLY	05/14/2021	13810.57	6682
71EN2	071	NO. 2	NO. 2 ENGINE	23074408	CAE330568	ENGINE	08/03/2018	12205.13	5903
71EN1	071	NO. 1	NO. 1 ENGINE	23074408	CAE330571	ENGINE	02/15/2019	12747.1	6166
710007	071	RIGHT ENGINE	RIGHT ENGINE LOWER AFT ISOLATOR	9914531-11	LK1144	ISOLATOR	07/28/2007	0	0
710007	071	LEFT ENGINE	LEFT ENGINE LOWER AFT ISOLATOR	9914531-11	LK1203	ISOLATOR	07/28/2007	0	0
710005	071	LEFT ENGINE	LEFT ENGINE UPPER AFT ISOLATOR	9914531-11	LK1209	ISOLATOR	07/28/2007	0	0
710005	071	RIGHT ENGINE	RIGHT ENGINE UPPER AFT ISOLATOR	9914531-11	LK1215	ISOLATOR	07/28/2007	0	0
710003	071	RIGHT ENGINE	RIGHT ENGINE LOWER FORWARD ISOLATOR	9914534-16	LK0200	ISOLATOR	07/28/2007	0	0
710002	071	LEFT ENGINE	LEFT ENGINE UPPER FORWARD ISOLATOR	9914534-16	LK0203	ISOLATOR	07/28/2007	0	0
710002	071	RIGHT ENGINE	RIGHT ENGINE UPPER FOWARD ISOLATOR	9914534-16	LK0224	ISOLATOR	07/28/2007	0	0
710003	071	LEFT ENGINE	LEFT ENGINE LOWER FORWARD ISOLATOR	9914534-16	LK0226	ISOLATOR	07/28/2007	0	0

723002	072		NO. 2 ENGINE - COMPRESSOR ROTOR 2ND STAGE COMPRESSOR WHEEL	23050752	L308264	WHEEL	01/26/2007	0	0
723002	072		NO. 1 ENGINE - COMPRESSOR ROTOR 2ND STAGE COMPRESSOR WHEEL	23050752	L308293	WHEEL	03/16/2007	0	0
725014	072		NO. 2 ENGINE - LP TURBINE ROTOR LOW PRESSURE TURBINE INTERSTAGE 1 & 2 SPACER	23054049	TW516288	SPACER	01/26/2007	0	0
725016	072		NO. 2 ENGINE - LP TURBINE ROTOR LOW PRESSURE TURBINE INTERSTAGE 2 & 3 SPACER	23054049	TW516289	SPACER	01/26/2007	0	0
725014	072		NO. 1 ENGINE - LP TURBINE ROTOR LOW PRESSURE TURBINE INTERSTAGE 1 & 2 SPACER	23054049	TW516349	SPACER	03/16/2007	0	0
725016	072		NO. 1 ENGINE - LP TURBINE ROTOR LOW PRESSURE TURBINE INTERSTAGE 2 & 3 SPACER	23054049	TW516357	SPACER	03/16/2007	0	0
721001	072		NO. 1 ENGINE - FAN ROTOR WHEEL	23058865	MW50840	WHEEL	03/16/2007	0	0
721001	072		NO. 2 ENGINE - FAN ROTOR WHEEL	23058865	MW50854	WHEEL	01/26/2007	0	0
721000	072		NO. 1 ENGINE - FAN ROTOR ASSEMBLY	23058869	MW50840	ROTOR ASSEMBLY	03/16/2007	0	0
721000	072		NO. 2 ENGINE - FAN ROTOR ASSEMBLY	23058869	MW50854	ROTOR ASSEMBLY	01/26/2007	0	0
721007	072		NO. 2 ENGINE - FAN ROTOR FORWARD FAN BLADE RETAINER	23062491	HK120757	RETAINER	01/26/2007	0	0

721007	072		NO. 1 ENGINE - FAN ROTOR FORWARD FAN BLADE RETAINER	23062491	HK120775	RETAINER	03/16/2007	0	0
725000	072		NO. 2 ENGINE - HPT ROTOR ASSEMBLY	23062609	A72797	ROTOR ASSEMBLY	01/26/2007	0	0
725000	072		NO. 1 ENGINE - HPT ROTOR ASSEMBLY	23062609	A72812	ROTOR ASSEMBLY	03/16/2007	0	0
723001	072		NO. 2 ENGINE - COMPRESSOR ROTOR 1ST STAGE COMPRESSOR WHEEL	23065041	L317285	WHEEL	01/26/2007	0	0
723001	072		NO. 1 ENGINE - COMPRESSOR ROTOR 1ST STAGE COMPRESSOR WHEEL	23065041	L317395	WHEEL	03/16/2007	0	0
723705	072		NO. 1 ENGINE - COMPRESSOR DIFFUSER	23065047	NY214200	DIFFUSER	03/16/2007	0	0
723705	072		NO. 2 ENGINE - COMPRESSOR DIFFUSER	23065047	NY214212	DIFFUSER	01/26/2007	0	0
723003	072		NO. 2 ENGINE - COMPRESSOR ROTOR 3RD STAGE COMPRESSOR WHEEL	23065303	L310110	WHEEL	01/26/2007	0	0
723003	072		NO. 1 ENGINE - COMPRESSOR ROTOR 3RD STAGE COMPRESSOR WHEEL	23065303	L310194	WHEEL	03/16/2007	0	0
725010	072		NO. 2 ENGINE - ROTOR ASSY- LPT ROTOR ASSEMBLY	23070097	A82778	ROTOR ASSEMBLY	01/26/2007	0	0
725010	072		NO. 1 ENGINE - ROTOR ASSY- LPT ROTOR ASSEMBLY	23070097	A82794	ROTOR ASSEMBLY	03/16/2007	0	0

725003	072		NO. 2 ENGINE - GAS GENERATOR TURBINE OR HP TURBINE ROTOR 1ST TO 2ND STAGE TURBINE SPACER	23071242	TW516107	SPACER	01/26/2007	0	0
725003	072		NO. 1 ENGINE - GAS GENERATOR TURBINE OR HP TURBINE ROTOR 1ST TO 2ND STAGE TURBINE SPACER	23071242	TW523008	SPACER	01/10/2012	4438.48	2239
723004	072		NO. 1 ENGINE - COMPRESSOR ROTOR 4TH STAGE COMPRESSOR WHEEL	23071259	L296795	WHEEL	03/16/2007	0	0
723004	072		NO. 2 ENGINE - COMPRESSOR ROTOR 4TH STAGE COMPRESSOR WHEEL	23071259	L296802	WHEEL	01/26/2007	0	0
723005	072		NO. 2 ENGINE - COMPRESSOR ROTOR 5TH STAGE COMPRESSOR WHEEL	23071260	L312852	WHEEL	01/26/2007	0	0
723005	072		NO. 1 ENGINE - COMPRESSOR ROTOR 5TH STAGE COMPRESSOR WHEEL	23071260	L312950	WHEEL	03/16/2007	0	0
723707	072		NO. 2 ENGINE - SPLIT BALL BEARING	23071692	NSN	BALL BEARING	01/26/2007	0	0
723707	072		NO. 1 ENGINE - SPLIT BALL BEARING	23071692	NSN	BALL BEARING	03/16/2007	0	0
723017	072		NO. 1 ENGINE - COMP/TURBINE SHAFT	23073165	L314158	SHAFT	03/16/2007	0	0
723017	072		NO. 2 ENGINE - COMP/TURBINE SHAFT	23073165	L314160	SHAFT	01/26/2007	0	0

725011	072		NO. 1 ENGINE - LP TURBINE ROTOR 1ST STAGE LOW PRESSURE TURBINE WHEEL	23073957	MW49135	WHEEL	03/16/2007	0	0
725011	072		NO. 2 ENGINE - LP TURBINE ROTOR 1ST STAGE LOW PRESSURE TURBINE WHEEL	23073957	MW49147	WHEEL	01/26/2007	0	0
723013	072		NO. 1 ENGINE - COMPRESSOR ROTOR 13TH STAGE COMPRESSOR WHEEL	23074213	L313183	WHEEL	03/16/2007	0	0
723013	072		NO. 2 ENGINE - COMPRESSOR ROTOR 13TH STAGE COMPRESSOR WHEEL	23074213	L313199	WHEEL	01/26/2007	0	0
723014	072		NO. 2 ENGINE - COMPRESSOR ROTOR 14TH STAGE COMPRESSOR WHEEL	23074214	L308699	WHEEL	01/26/2007	0	0
723014	072		NO. 1 ENGINE - COMPRESSOR ROTOR 14TH STAGE COMPRESSOR WHEEL	23074214	L313281	WHEEL	03/16/2007	0	0
723007	072		NO. 2 ENGINE - COMPRESSOR ROTOR 7TH STAGE COMPRESSOR WHEEL	23074217	L299195	WHEEL	01/26/2007	0	0
723007	072		NO. 1 ENGINE - COMPRESSOR ROTOR 7TH STAGE COMPRESSOR WHEEL	23074217	L299225	WHEEL	03/16/2007	0	0
721011	072		NO. 1 ENGINE - FAN ROTOR FAN DRIVE SHAFT	23074382	GV246223	SHAFT	03/16/2007	0	0
721011	072		NO. 2 ENGINE - FAN ROTOR FAN DRIVE SHAFT	23074382	GV246254	SHAFT	01/26/2007	0	0

725015	072		NO. 2 ENGINE - LP TURBINE ROTOR LOW PRESSURE TURBINE FORWARD SHAFT	23074538	GV250000	SHAFT	01/26/2007	0	0
725015	072		NO. 1 ENGINE - LP TURBINE ROTOR LOW PRESSURE TURBINE FORWARD SHAFT	23074538	GV253005	SHAFT	03/16/2007	0	0
723006	072		NO. 1 ENGINE - COMPRESSOR ROTOR 6TH STAGE COMPRESSOR WHEEL	23074717	L275081	WHEEL	03/16/2007	0	0
723006	072		NO. 2 ENGINE - COMPRESSOR ROTOR 6TH STAGE COMPRESSOR WHEEL	23074717	L275161	WHEEL	01/26/2007	0	0
723008	072		NO. 2 ENGINE - COMPRESSOR ROTOR 8TH STAGE COMPRESSOR WHEEL	23074721	L305106	WHEEL	01/26/2007	0	0
723008	072		NO. 1 ENGINE - COMPRESSOR ROTOR 8TH STAGE COMPRESSOR WHEEL	23074721	L305224	WHEEL	03/16/2007	0	0
723009	072		NO. 2 ENGINE - COMPRESSOR ROTOR 9TH STAGE COMPRESSOR WHEEL	23074722	L310545	WHEEL	01/26/2007	0	0
723009	072		NO. 1 ENGINE - COMPRESSOR ROTOR 9TH STAGE COMPRESSOR WHEEL	23074722	L310554	WHEEL	03/16/2007	0	0
723010	072		NO. 2 ENGINE - COMPRESSOR ROTOR 10TH STAGE COMPRESSOR WHEEL	23074723	L309558	WHEEL	01/26/2007	0	0

723010	072		NO. 1 ENGINE - COMPRESSOR ROTOR 10TH STAGE COMPRESSOR WHEEL	23074723	L309591	WHEEL	03/16/2007	0	0
723011	072		NO. 2 ENGINE - COMPRESSOR ROTOR 11TH STAGE COMPRESSOR WHEEL	23074724	L308969	WHEEL	01/26/2007	0	0
723011	072		NO. 1 ENGINE - COMPRESSOR ROTOR 11TH STAGE COMPRESSOR WHEEL	23074724	L309011	WHEEL	03/16/2007	0	0
723012	072		NO. 2 ENGINE - COMPRESSOR ROTOR 12TH STAGE COMPRESSOR WHEEL	23074725	L295116	WHEEL	01/26/2007	0	0
723012	072		NO. 1 ENGINE - COMPRESSOR ROTOR 12TH STAGE COMPRESSOR WHEEL	23074725	L295455	WHEEL	03/16/2007	0	0
723015	072		NO. 1 ENGINE - COMPRESSOR SHAFT CONE ASSEMBLY	23076016	L311727	ASSEMBLY	03/16/2007	0	0
723015	072		NO. 2 ENGINE - COMPRESSOR SHAFT CONE ASSEMBLY	23076016	L311732	ASSEMBLY	01/26/2007	0	0
723019	072		NO. 2 ENGINE - COMPRESSOR TIE BOLT	23076018	L316481	TIE BOLT	01/26/2007	0	0
723019	072		NO. 1 ENGINE - COMPRESSOR TIE BOLT	23076018	L316561	TIE BOLT	03/16/2007	0	0
723018	072		NO. 2 ENGINE - STUB COMP SHAFT	23077677	GV256836	SHAFT	01/26/2007	0	0
723018	072		NO. 1 ENGINE - STUB COMP SHAFT	23077677	GV256860	SHAFT	03/16/2007	0	0
723020	072		NO. 2 ENGINE - COMPRESSOR 8TH CASE	23077727	JB226586	CASE	01/26/2007	0	0

723020	072		NO. 1 ENGINE - COMPRESSOR 8TH CASE	23077727	JB226589	CASE	03/16/2007	0	0
725012	072		NO. 1 ENGINE - LP TURBINE ROTOR 2ND STAGE LOW PRESSURE TURBINE WHEEL	23079221	MW48793	WHEEL	03/16/2007	0	0
725012	072		NO. 2 ENGINE - LP TURBINE ROTOR 2ND STAGE LOW PRESSURE TURBINE WHEEL	23079221	MW48796	WHEEL	01/26/2007	0	0
725013	072		NO. 2 ENGINE - LP TURBINE ROTOR 3RD STAGE LOW PRESSURE TURBINE WHEEL	23079224	MW48957	WHEEL	01/26/2007	0	0
725013	072		NO. 1 ENGINE - LP TURBINE ROTOR 3RD STAGE LOW PRESSURE TURBINE WHEEL	23079224	MW48970	WHEEL	03/16/2007	0	0
725001	072		NO. 2 ENGINE - 1ST STAGE GAS GENERATOR TURBINE OR HP TURBINE WHEEL	23079946	MW51851	WHEEL	01/26/2007	0	0
725001	072		NO. 1 ENGINE - 1ST STAGE GAS GENERATOR TURBINE OR HP TURBINE WHEEL	23079946	MW51881	WHEEL	03/16/2007	0	0
725002	072		NO. 1 ENGINE - 2ND STAGE GAS GENERATOR TURBINE OR HP TURBINE WHEEL	23084520	MW51983	WHEEL	03/16/2007	0	0
725002	072		NO. 2 ENGINE - 2ND STAGE GAS GENERATOR TURBINE OR HP TURBINE WHEEL	23084520	MW53641	WHEEL	01/26/2007	0	0
723000	072		NO. 2 ENGINE - COMPRESSOR ROTOR ASSEMBLY	23086657	A21732	ROTOR ASSEMBLY	04/23/2014	7346.6	3661
723000	072		NO. 1 ENGINE - COMPRESSOR ROTOR ASSEMBLY	23086657	A21755	ROTOR ASSEMBLY	01/31/2019	11884.88	5725

720039	072		NO. 2 ENGINE - GEARBOX ACCESS DRIVE ASSEMBLY	23086770	2871	GEARBOX	08/20/2010	2929.5	1530
720039	072		NO. 1 ENGINE - GEARBOX ACCESS DRIVE ASSEMBLY	23086770	2886	GEARBOX	03/16/2007	0	0
722005	072		NO. 1 ENGINE - FAN SPINNER ASSEMBLY	23087826	FF371542	ASSEMBLY	08/07/2010	2852.4	1488
722005	072		NO. 2 ENGINE - FAN SPINNER ASSEMBLY	23087826	FF378262	ASSEMBLY	08/20/2010	2929.5	1530
720042	072		NO. 2 ENGINE - AC GENERATOR CARBON SEAL ASSEMBLY	23090113	MSA2488	CARBON SEAL ASSEMBLY	11/03/2017	11188.88	5447
720046	072		NO. 2 ENGINE - FPMU CARBON SEAL ASSEMBLY	42520-70	21519	CARBON SEAL ASSEMBLY- CORP CARE WARRANTY	11/15/2008	1457.5	774
730001	073	NO. 4	NO. 1 ENGINE - NO. 4 FUEL NOZZLE ASSEMBLY	23073453	1PP08296	FUEL NOZZLE	10/21/2022	14266.57	6795
730001	073	NO. 14	NO. 1 ENGINE - NO. 14 FUEL NOZZLE ASSEMBLY	23073453	1RP02468	FUEL NOZZLE	10/21/2022	14266.57	6795
730001	073	NO. 1	NO. 1 ENGINE - NO. 1 FUEL NOZZLE ASSEMBLY	23073453	1RP02470	FUEL NOZZLE	10/21/2022	14266.57	6795
730001	073	NO. 5	NO. 1 ENGINE - NO. 5 FUEL NOZZLE ASSEMBLY	23073453	1RP03087	FUEL NOZZLE	10/21/2022	14266.57	6795
730001	073	NO. 3	NO. 1 ENGINE - NO. 3 FUEL NOZZLE ASSEMBLY	23073453	1RP03381	FUEL NOZZLE	10/21/2022	14266.57	6795
730001	073	NO. 13	NO. 1 ENGINE - NO. 13 FUEL NOZZLE ASSEMBLY	23073453	1UM03732	FUEL NOZZLE	10/21/2022	14266.57	6795
730001	073	NO. 11	NO. 1 ENGINE - NO. 11 FUEL NOZZLE ASSEMBLY	23073453	1YN07247	FUEL NOZZLE	10/21/2022	14266.57	6795
730001	073	NO. 12	NO. 1 ENGINE - NO. 12 FUEL NOZZLE ASSEMBLY	23073453	1YN07252	FUEL NOZZLE	10/21/2022	14266.57	6795
730001	073	NO. 2	NO. 1 ENGINE - NO. 2 FUEL NOZZLE ASSEMBLY	23073453	1YN07254	FUEL NOZZLE	10/21/2022	14266.57	6795
730001	073	NO. 10	NO. 1 ENGINE - NO. 10 FUEL NOZZLE ASSEMBLY	23073453	1YN07261	FUEL NOZZLE	10/21/2022	14266.57	6795

730001	073	NO. 9	NO. 1 ENGINE - NO. 9 FUEL NOZZLE ASSEMBLY	23073453	1YN07262	FUEL NOZZLE	10/21/2022	14266.57	6795
730001	073	NO. 16	NO. 1 ENGINE - NO. 16 FUEL NOZZLE ASSEMBLY	23073453	1YN07264	FUEL NOZZLE	10/21/2022	14266.57	6795
730001	073	NO. 7	NO. 1 ENGINE - NO. 7 FUEL NOZZLE ASSEMBLY	23073453	1YN08330	FUEL NOZZLE	10/21/2022	14266.57	6795
730001	073	NO. 15	NO. 1 ENGINE - NO. 15 FUEL NOZZLE ASSEMBLY	23073453	1ZN06599	FUEL NOZZLE	10/21/2022	14266.57	6795
730001	073	NO. 6	NO. 1 ENGINE - NO. 6 FUEL NOZZLE ASSEMBLY	23073453	1ZR02993	FUEL NOZZLE	10/21/2022	14266.57	6795
730001	073	NO. 8	NO. 1 ENGINE - NO. 8 FUEL NOZZLE ASSEMBLY	23073453	1ZR07786	FUEL NOZZLE	10/21/2022	14266.57	6795
732101	073		NO. 1 ENGINE - FUEL PUMP METERING UNIT	23075074	SCN15-167	FUEL PUMP	02/06/2016	8932.85	4381
732101	073		NO. 2 ENGINE - FUEL PUMP METERING UNIT	23076368	SCN06052	FUEL PUMP - SEE NOTES	10/03/2012	5574.18	2813
732503	073		NO. 1 ENGINE - POSITION B FADEC	23092715	BX170460	FADEC	04/01/2018	11306.9	5468
732503	073		NO. 2 ENGINE - POSITION B FADEC	23092715	BX170461	FADEC	04/01/2018	11652.97	5658
732501	073		NO. 1 ENGINE - POSITION A FADEC	23092715	BX170463	FADEC	04/01/2018	11306.9	5468
732501	073		NO. 2 ENGINE - POSITION A FADEC	23092715	BX170464	FADEC	04/01/2018	11652.97	5658
732505	073		NO. 1 ENGINE - ACT BYPASS INDICATOR	77878759	NSN	ACTUAL FUEL BYPASS INDICATOR	03/16/2007	0	0
732505	073		NO. 2 ENGINE - ACT BYPASS INDICATOR	77878759	NSN	ACTUAL FUEL BYPASS INDICATOR	01/26/2007	0	0
732506	073		NO. 1 ENGINE - IMP BYPASS INDICATOR	77878902	148324	INDICATOR	03/16/2007	0	0
732506	073		NO. 2 ENGINE - IMP BYPASS INDICATOR	77879187	SN-UNKNOWN	IMPENDING FUEL BYPASS INDICATOR	01/29/2012	4722.22	2404

731005	073	L/H	L/H MOTIVE FLOW PUMP RELIEF VALVE	848513	698	RELIEF VALVE	01/28/2008	638.2	338
731010	073	R/H	R/H MOTIVE FLOW PUMP RELIEF VALVE	848513	733	RELIEF VALVE	01/11/2008	588.9	310
731001	073		NO. 1 ENGINE - MOTIVE FLOW FUEL PUMP	9914425-1	MX660228H	MOTIVE FLOW FUEL PUMP	09/06/2021	13203.42	6343
733001	073		NO. 2 ENGINE - FUEL FLOW TRANSMITTER	9914515-1	U9186	TRANSMITTER	01/26/2007	0	0
733001	073		NO. 1 ENGINE - FUEL FLOW TRANSMITTER	9914515-1	U9187	TRANSMITTER	03/16/2007	0	0
731001	073		NO. 2 ENGINE - MOTIVE FLOW FUEL PUMP	99914425-1	MX708592H	FUEL PUMP	09/06/2021	13747.68	6642
742107B	074		NO. 2 ENGINE - INBOARD IGNITER LEAD	2305368	UM06386926	IGNITER LEAD	01/26/2007	0	0
742107B	074		NO. 1 ENGINE - INBOARD IGNITER LEAD	23054368	UM06386930	IGNITER LEAD	03/16/2007	0	0
742101	074	TOP	NO. 2 ENGINE - TOP IGNITER	23062672	SN- UNKNOWN	IGNITER PLUG	08/09/2018	11887.18	5761
742103	074	BOTTOM	NO. 2 ENGINE - BOTTOM IGNITER	23062672	SN- UNKNOWN	IGNITER PLUG	08/09/2018	11887.18	5761
741103	074		NO. 2 ENGINE - ALTERNATOR STATOR	23075489	UN11291	STATOR	01/26/2007	0	0
741103	074		NO. 1 ENGINE - ALTERNATOR STATOR	23075489	UN11389	STATOR	03/16/2007	0	0
741301	074		NO. 2 ENGINE - LEFT EXCITOR IGNITION	23077617	UY06404676	EXCITER	01/26/2007	0	0
741301	074		NO. 1 ENGINE - LEFT EXCITOR IGNITION	23077617	UY06404676	EXCITER	06/23/2015	8474.7	4151
741303	074		NO. 2 ENGINE - RIGHT EXCITOR IGNITION	23077617	UY06505135	EXCITER	06/23/2015	8603.62	4247
741303	074		NO. 1 ENGINE - RIGHT EXCITOR IGNITION	23077617	UY06505136	EXCITER	03/16/2007	0	0
742101	074	TOP	NO. 1 ENGINE - TOP IGNITER	PN- UNKNOWN	SN- UNKNOWN	-	02/01/2019	11884.88	5725
742103	074	BOTTOM	NO. 1 ENGINE - BOTTOM IGNITER	PN- UNKNOWN	SN- UNKNOWN	-	02/01/2019	11884.88	5725

754306	075	NO. 2	NO. 1 ENGINE - NO. 2 P2.5 SENSOR	23075351	QW702218K	SENSOR	01/31/2019	11884.88	5725
754305	075	NO. 1	NO. 1 ENGINE - NO. 1 P2.5 SENSOR	23075351	QW702460K	SENSOR	01/31/2019	11884.88	5725
754305	075	NO. 1	NO. 2 ENGINE - NO. 1 P2.5 SENSOR	23075351	SN- UNKNOWN	SENSOR	01/26/2007	0	0
754306	075	NO. 2	NO. 2 ENGINE - NO. 2 P2.5 SENSOR	23075351	SN- UNKNOWN	SENSOR	01/26/2007	0	0
753101	075	TOP	NO. 2 ENGINE - TOP BLEED AIR VALVE	6809125	NSN	VALVE	01/26/2007	0	0
753101	075	TOP	NO. 1 ENGINE - TOP BLEED AIR VALVE	6809125	NSN	VALVE	03/16/2007	0	0
753101A	075	BOTTOM	NO. 1 ENGINE - BOTTOM BLEED AIR VALVE	6809125	NSN	VALVE	03/16/2007	0	0
753101A	075	BOTTOM	NO. 2 ENGINE - BOTTOM BLEED AIR VALVE	6809125	NSN	VALVE	01/26/2007	0	0
761000	076		THROTTLE QUADRANT CONTROL	6715180-9	HAMI-0192	CONTROL ASSY, THROTTLE QUADRANT	04/23/2018	11942.55	5788
770003	077		STANDBY ENGINE INDICATOR	10485N05M03	0710	INDICATOR	03/29/2023	15352.7	7331
770101	077		NO. 1 ENGINE - ITT TRIM PLUG	23058854-16	UM05422499	PLUG	01/31/2019	11884.88	5725
772105	077		NO. 2 ENGINE - ITT THERMOCOUPLE "A" HARNES	23059920	UM17070077	WIRING HARNES	05/27/2017	10653.75	5200
772110	077		NO. 1 ENGINE - ITT THERMOCOUPLE "B" HARNES	23059921	UM11240060	HARNES, THERMOCO UPLE WIRING (B)	08/23/2011	4142.08	2099
772110	077		NO. 2 ENGINE - ITT THERMOCOUPLE "B" HARNES	23059921	UM17100103	HARNES, THERMOCO UPLE WIRING (B)	05/27/2017	10653.75	5200
772115	077		NO. 2 ENGINE - N1 PROBE	23076155	ENA332	SENSOR	07/08/2010	2900.77	1517
772115	077		NO. 1 ENGINE - N1 PROBE	23076155	ENA363	SENSOR	08/27/2010	2903.43	1514

783020	078	LEFT	LEFT T/R INTERLOCK SOLENOID	183238-001	N/A	SOLENOID	03/02/2023	15310.27	7315
781101	078	RIGHT ENGINE	RIGHT ENGINE THRUST REVERSER ASSEMBLY	9914431-10	MOREG0278	THRUST REVERSER ASSEMBLY	07/28/2007	0	0
783015	078	RIGHT	RIGHT T/R NK118 MODULE	9914431-11	00941	MODULE, THRUST REVERSER	02/17/2023	15309.67	7314
783015	078	LEFT	LEFT T/R NK117 MODULE	9914431-11	01069	MODULE, THRUST REVERSER	02/10/2024	15790.5	7523
781103	078	LEFT ENGINE	LEFT ENGINE THRUST REVERSER CONTROL VALVE	9914431-6	0257	CONTROL VALVE	03/03/2015	8473.4	4180
781101	078	LEFT ENGINE	LEFT ENGINE THRUST REVERSER ASSEMBLY	9914431-9	MOREG0296	THRUST REVERSER ASSEMBLY	07/28/2007	0	0
783007	078	RIGHT INBOARD	RIGHT INBOARD T/R PRIMARY ACTUATOR	CX7833001-7	A30040657	ACTUATOR	12/08/2017	11515.3	5601
783007	078	RIGHT OUTBOARD	RIGHT OUTBOARD T/R PRIMARY ACTUATOR	CX7833001-7	A30040744	ACTUATOR	10/10/2025	15936.1	7596
783007	078	LEFT INBOARD	LEFT INBOARD T/R PRIMARY ACTUATOR	CX7833001-7	MOREG1388	ACTUATOR	07/28/2007	0	0
783007	078	LEFT OUTBOARD	LEFT OUTBOARD T/R PRIMARY ACTUATOR	CX7833001-7	MOREG1389	ACTUATOR	07/28/2007	0	0
781103	078	RIGHT ENGINE	RIGHT ENGINE THRUST REVERSER CONTROL VALVE	CX7835006-1	0274	VALVE, THRUST REVERSER	03/03/2015	8473.4	4180
783011	078	RIGHT INBOARD	RIGHT INBOARD T/R LATCH ACTUATOR	DS260-5	NSN	ACTUATOR	07/28/2007	0	0
783011	078	RIGHT OUTBOARD	RIGHT OUTBOARD T/R LATCH ACTUATOR	DS260-5	NSN	ACTUATOR	07/28/2007	0	0

783011	078	LEFT OUTBOARD	LEFT OUTBOARD T/R LATCH ACTUATOR	DS260-5	NSN	ACTUATOR	07/28/2007	0	0
783011	078	LEFT INBOARD	LEFT INBOARD T/R LATCH ACTUATOR	DS260-5	NSN	ACTUATOR	07/28/2007	0	0
792509	079		NO. 2 ENGINE - RTD TOTAL TEMP SENSOR	23059750	NSN	SENSOR	01/26/2007	0	0
792509	079		NO. 1 ENGINE - RTD TOTAL TEMP SENSOR	23059750	RTAN295	SENSOR	01/31/2019	11884.88	5725
793303	079		NO. 1 ENGINE - LOW OIL LEVEL SENSOR	23063236	NSN	SENSOR	03/16/2007	0	0
793303	079		NO. 2 ENGINE - LOW OIL LEVEL SENSOR	23063236	NSN	SENSOR	01/26/2007	0	0
793301	079		NO. 1 ENGINE - LOW OIL PRESSURE SENSOR	23067667	NSN	SENSOR	03/16/2007	0	0
793301	079		NO. 2 ENGINE - LOW OIL PRESSURE SENSOR	23067667	NSN	SENSOR	01/26/2007	0	0
791101	079		NO. 1 ENGINE - OIL TANK ASSEMBLY	23070328	RJ15167	OIL TANK ASSEMBLY	03/16/2007	0	0
792103	079		NO. 2 ENGINE - PRESS/TEMP SENSOR	23073715	QW-7514V	TRANSDUCER	01/08/2009	1568.3	823
792301	079		NO. 1 ENGINE - OIL FILTER ASSEMBLY	23075105	WQY0045	FILTER ASSEMBLY	01/31/2019	11884.88	5725
792501	079		NO. 2 ENGINE - OIL AIR COOLED COOLER	23075194	VR2976	COOLER	01/26/2007	0	0
792501	079		NO. 1 ENGINE - OIL AIR COOLED COOLER	23075194	VR3000	COOLER	03/16/2007	0	0
792503	079		NO. 2 ENGINE - OIL FUEL COOLED COOLER	23077047	VR3141	COOLER	01/26/2007	0	0
792503	079		NO. 1 ENGINE - OIL FUEL COOLED COOLER	23077047	VR3169	COOLER	03/16/2007	0	0
792101	079		NO. 1 ENGINE - LUBE/SCAVENGE PUMP	23079382	NL-1433	PUMP	02/01/2019	11884.88	5725
792101	079		NO. 2 ENGINE - LUBE/SCAVENGE PUMP	23079382	NL3022	PUMP	01/26/2007	0	0
791101	079		NO. 2 ENGINE - OIL TANK ASSEMBLY	23079447	RJ508437	TANK ASSEMBLY	09/30/2009	2090.7	1112

791203	079		NO. 2 ENGINE - OIL TANK PRESSURIZING VALVE ASSEMBLY	23083749	GWL-0080	VALVE ASSY	08/07/2009	1983	1047
791203	079		NO. 1 ENGINE - OIL TANK PRESSURIZING VALVE ASSEMBLY	23083749	GWL-0118	VALVE ASSY	08/07/2009	1905.9	1005
792103	079		NO. 1 ENGINE - PRESS/TEMP SENSOR	23088772	QWKU0029150	SENSOR	02/01/2019	11884.88	5725
791103	079	LEFT ENGINE	LEFT ENGINE OIL TRANSMITTER	APT/T-3-1000-1	NSN	TRANSMITTER	07/28/2007	0	0
791103	079	RIGHT ENGINE	RIGHT ENGINE OIL TRANSMITTER	APT/T-3-1000-1	NSN	TRANSMITTER	07/28/2007	0	0
792301	079		NO. 2 ENGINE - OIL FILTER ASSEMBLY	PN	SN-UNKNOWN	-	08/09/2018	11887.18	5761
801003	080	RIGHT	RIGHT AIR TURBINE START VALVE	3215434-1	475	VALVE CONTROL	06/23/2015	8810.57	4342
801003	080	LEFT	LEFT AIR TURBINE START VALVE	3215434-1	613	VALVE CONTROL	06/23/2015	8810.57	4342
801001	080	RIGHT	RIGHT AIR TURBINE STARTER	3505972-5	115C	STARTER	08/16/2024	15918.85	7586
801001	080	LEFT	LEFT AIR TURBINE STARTER	3505972-5	201	STARTER	08/23/2018	12274.6	5932